## SLIDEDRIVER II SNOW BRUSH AND SCRAPER

The snow brush and snow scraper kits help keep ice and snow buildup at a minimum along the drive rail of the SlideDriver II gate operators.

Note: The snow brush and snow scraper kits can be ordered together or separately. These instructions explain the installation process for both.

#### **PARTS**

Snow brushes and/or snow scrapers

### **HARDWARE**

- ¼-20 x ¾ hex head cap screw
- 1/4 in flat washer
- ½-20 lock nut
- 8-32 x ½ self-tapping screw

## **TOOLS**

- Phillips-head screwdriver
- Wrench

### **INSTALL THE SNOW BRUSHES**

- Loosen the screws that secure the cover to the SlideDriver II chassis and remove the cover.
- 2. Set the power switch to OFF.
- 3. Slide the snow brushes into place and secure them using the fasteners provided. The aluminum flange should be inside the operator (Figure 3 and Figure 6).
- 4. Set the power switch to ON.
- 5. Test the gate operator.
- Carefully replace the cover and secure it to the chassis.

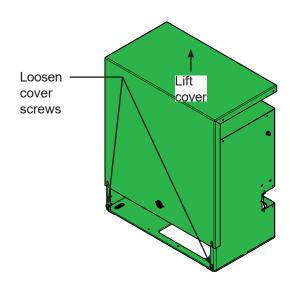


Figure 1. Remove the Cover

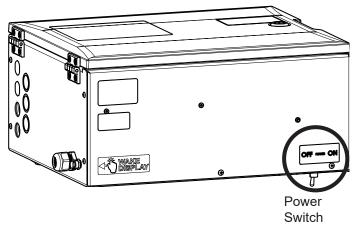


Figure 2. Set Power Switch to OFF

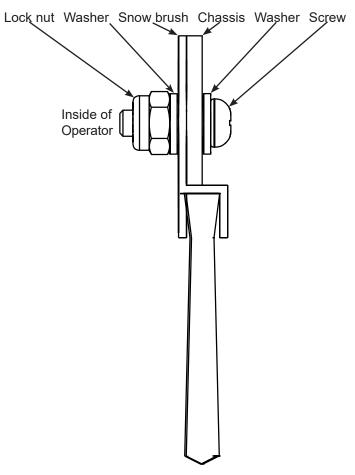


Figure 3. Fasten Snow Brushes

# SLIDEDRIVER II SNOW BRUSH AND SCRAPER

### **INSTALL THE SNOW SCRAPERS**

- 1. Follow steps 1 through 3 of Install the Snow Brushes.
- Take note of the orientation of the right and left snow scrapers. Slide the brackets into place and adjust them so the scraper rests about ½ in above the drive rail. Secure the bracket using the fasteners provided (Figure 4 and Figure 6).
- 3. Install the snow scraper blades on top of the snow scraper brackets with the self-tapping screws (Figure 5).
- 4. Follow steps 4 through 6 of Install the Snow Brushes.

Screw Washer Snow Scraper Chassis Washer Lock nut

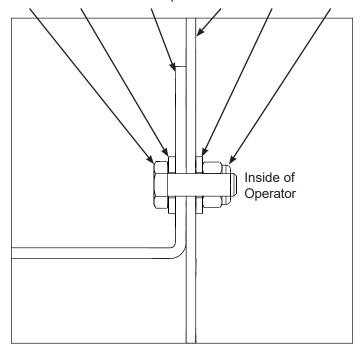


Figure 4. Snow Scraper Bracket Fasteners

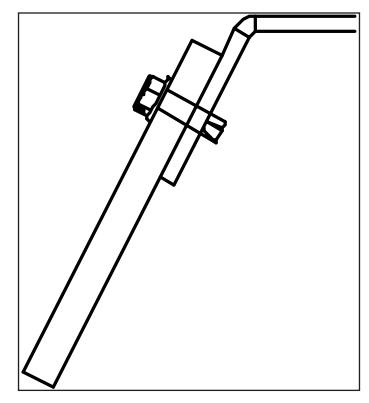


Figure 5. Snow Scraper Self-Tapping Screw

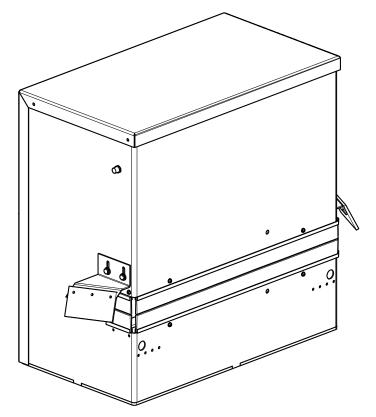


Figure 6. Complete Snow Brush and Scraper Installation