





		DATE		
A		3/3/2015	RAW	
SET THE USER RELAY 3 LOGIC FUNCTION TO ONE OF THE FOLLOWING:				
	 A. R2 "19": LED LIGHTS FLASH WHEN THE ARM IS NOT ON THE OPEN LIMIT. B. R2 "27": LED LIGHTS REMAIN ON THROUGHOUT ARM TRAVEL AND TURN OFF WHEN OPEN 			
	LIMIT IS REACHED. C. R2 "28": LED LIGHTS FLASH THROUGHOUT ARM TRAVEL AND TURN OFF WHEN OPEN LIMIT IS REACHED.			
•	PRESS MENU TO REURN TO RUN MODE OR SET THE BREAK AWAY SWITCH AS FOLLOWS-			
•	TO TURN ON THE MAGNETIC PROXIMITY SWITCH IN THE BREAK AWAY ARM ASEMBLY, NAVIGATE TO BA IN THE INSTALLER MENU.			
•	SELECT BA AND CHANGE THE MENU ITEM TO 1.			
•	EXIT THE INSTALLER MENU MODE BY PRESSING MENU TO RETURN TO RUN MODE.			
•	TEST BREAK AWAY SENSOR FUNCTION BY MANUALLY OPENING BRACKET. DISPLAY SHOULD			
	INDICATE - FAULT 7 MISSING ARM			
	IF OPERATING CORRECTLY.			
•	• POWER OPERATOR DOWN.			
•	INSTALL BREAK AWAY FASTENERS BASED ON CHART. EACH BOLT IS SECURED WITH AN ALUMINUM LOCK WSHER AND NYLON HEX NUT. TORQUE TO 15in-lb.			
•	INSERT BARRIER ARM INTO ATTACHMENT PLATE AND SECURE USING SUPPLIED HARDWARE.			
•	CONNECT LIGHTING: MAKE CERTAIN CONNECTORS ARE FULLY SEATED BEFORE SCREWING HALVES TOGETHER.			
•	INSTALL ARM BRACKET COVER AND SECURE WITH PROVIDED KNOB.			
•	POWER OPERATOR UP AND PUT INTO SERVICE.			
BREAK AWAY FASTENERS				
	Arm Length Fasteners Applie	es to:		
	r / = 10 ft (3 m) 2 nylon bolts Low wind			
< 10 ft 1 nylon bolt High wind >/= 10 ft 1 stool bolt Low wind				
	$P^{0} = 10 \pi$			
*NOTE: Be aware, when using two steel bolts,				
	that the arm may bend before the nylon r fail which voids the Limited Warranty.	uis		
NOTE: DRAWING IS NOT TO SCALE.				
	DOCUMENT TITLE INSTALL INSTRUCTIONS, STRONGARM BREAK AWAY WITH LIGHTS AND SENSOR. DRAWN DATE 3/3/2015 CHECKED DATE DOCUMENT NUMBER APPROVED DATE THIRD ANGLE PR	47	A	
Ker	IN SENSOR. APPROVED DATE THIRD ANGLE PR			