

QUICK START GUIDE:

EDSWG/A Keypad Programming for Nice Radio Receivers

The EDSWG Wireless Keypad will only work with NICE radio receivers.

FACTORY CODES:

- Channel button A is **1 1**
- Channel button B is **2 2**
- Channel button C is **3 3**

TRANSMITTING:

Press the code, then the channel button

- *Example:** **1 1** A will transmit on channel A
- *Note:** The same code can be programmed for each channel.
- *Note:** The keypad will transmit as long as the channel button is held down.

MODE 1 RECEIVER PROGRAMMING:

Mode 1 = Button A is receiver channel 1, button B is receiver channel 2 and button C is receiver channel 3

OXI/A Receiver:

- i. Press and hold the Learn button on the OXI/A receiver until the light comes on solid and release
- ii. On the keypad, press **1 1** and then hold **A** until the receiver light goes out
- iii. Programming is complete for buttons A, B, and C

318N Receiver (only buttons A and B will function):

- i. Press and release the Learn button on the 318N receiver
- ii. Immediately after releasing the Learn button on the keypad, press **1 1** and then hold **A** until the receiver light goes out
- iii. Release **A** and immediately press **A** again until the light on the receiver comes back on and flashes
- iv. Programming is complete for all buttons **A** and **B**

CHANGING CODES:

Codes are configurable from 1 to 8 digits in length

CAUTION: STORE CODES IN A SAFE PLACE! It is not possible to reset keypad to default if codes are lost.

- | | |
|--|---|
| <ol style="list-style-type: none"> i. Press and hold 0 ii. While holding 0, press and release A iii. Release 0 iv. Press the existing code | <ol style="list-style-type: none"> v. Press A vi. Press the new code vii. Press A viii. Press the new code ix. Press A |
|--|---|

*Note: The same procedure is used to program all channel buttons

TO USE THE KEYPAD WITHOUT A CODE:

This allows the keypad to work as a simple entry/exit button with a single press of the channel button.

Deactivate code for channel A, B or C. Channel button A shown.

- i. Press and hold 0
- ii. While holding 0, press and release A
- iii. Release 0
- iv. Press the existing code
- v. Press A
- vi. Press A
- vii. Press A

Reactivate code for channel A, B or C. Channel button A shown.

- i. Press and hold 0
- ii. While holding 0, press and release A
- iii. Release 0
- iv. Press A
- v. Press your new code
- vi. Press A
- vii. Press your new code again
- viii. Press A