



INSTALL THESE WIRES TO USE THE "LOCK INTERLOCK" FUNCTION WHICH WILL PREVENT GATE OPERATION UNTIL THE SOLENOID LOCK IS FULLY DISENGAGED.

PROGRAM USER #2 RELAY TO: 6-"GATE LOCK OUTPUT"

COMM.
N.O.



HySecurity Inc. 6623 South 228th St. Kent Wa. 98032-1876
PROPRIETARY INFORMATION OF HYSECURITY GATE INC.

This document and the information contained herein are the confidential, proprietary, and trade secret information of HySecurity Gate Inc. ("HySecurity"). Any party receiving, accepting or retaining this document and any information contained therein solely as may be required to manufacture products or components for HySecurity and will not provide this document or any information therein to any other party, or use it for any other purpose without the express prior written consent of HySecurity.

DESCRIPTION	SOLENOID LOCK
-------------	---------------

ECN NO: D0016	REV A	CHANGE DESCRIPTION ADD INTERLOCK OPTION	REV BY DUKE	REV DATE 032707	PART NO:	SHEET 1 OF 1
------------------	----------	--	----------------	--------------------	----------	--------------