## *TECHNICAL BULLETIN*

## Fire Department Open Input Function Description

**ISSUE:** The function of the Fire Department Open Input (override) on the SmartTouch, SmartDC, and SmartCNX controllers should be fully described to clarify it's use.

**OPERATOR MODEL(S):** All operators utilizing SmartTouch, SmartDC, and SmartCNX controllers

## **ISSUE DATE:** 03/12/2020


**IMPACTED PRODUCT DATES:** All manufacturing dates

## **DESCRIPTION:**

When the Fire Department Open Input (override) is activated:

- The gate fully opens while overriding any active external entrapment sensors or active close inputs.
- At the open limit the gate stops in Entrapment Mode due to the sensor override.
- To exit Entrapment Mode, and return to Normal operation, the operator needs a Stop command or an Open command, which will place it into Safe Mode.

**NOTE:** To avoid having to open the unit to access the STOP button, the Stop function can be enabled by pressing the button located on each operator model as shown below in Figure 1.

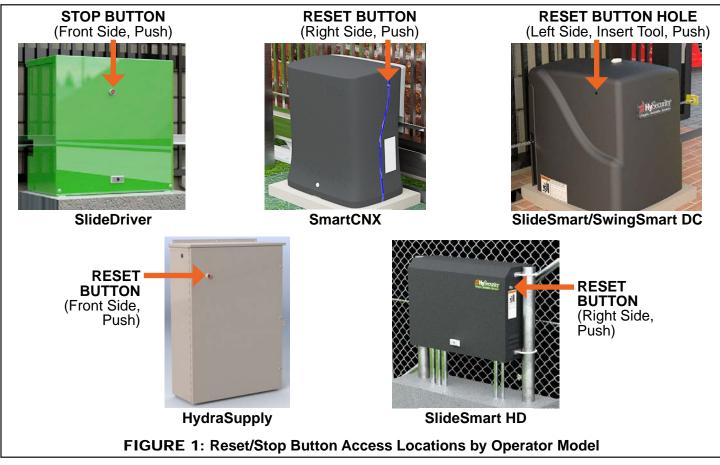

 An additional Open command or a Loop Input will reenable the close timer, if present, or a Close command will close the gate.