


# Strong Arm (M30)<sup>TM</sup>

## Installation Instructions

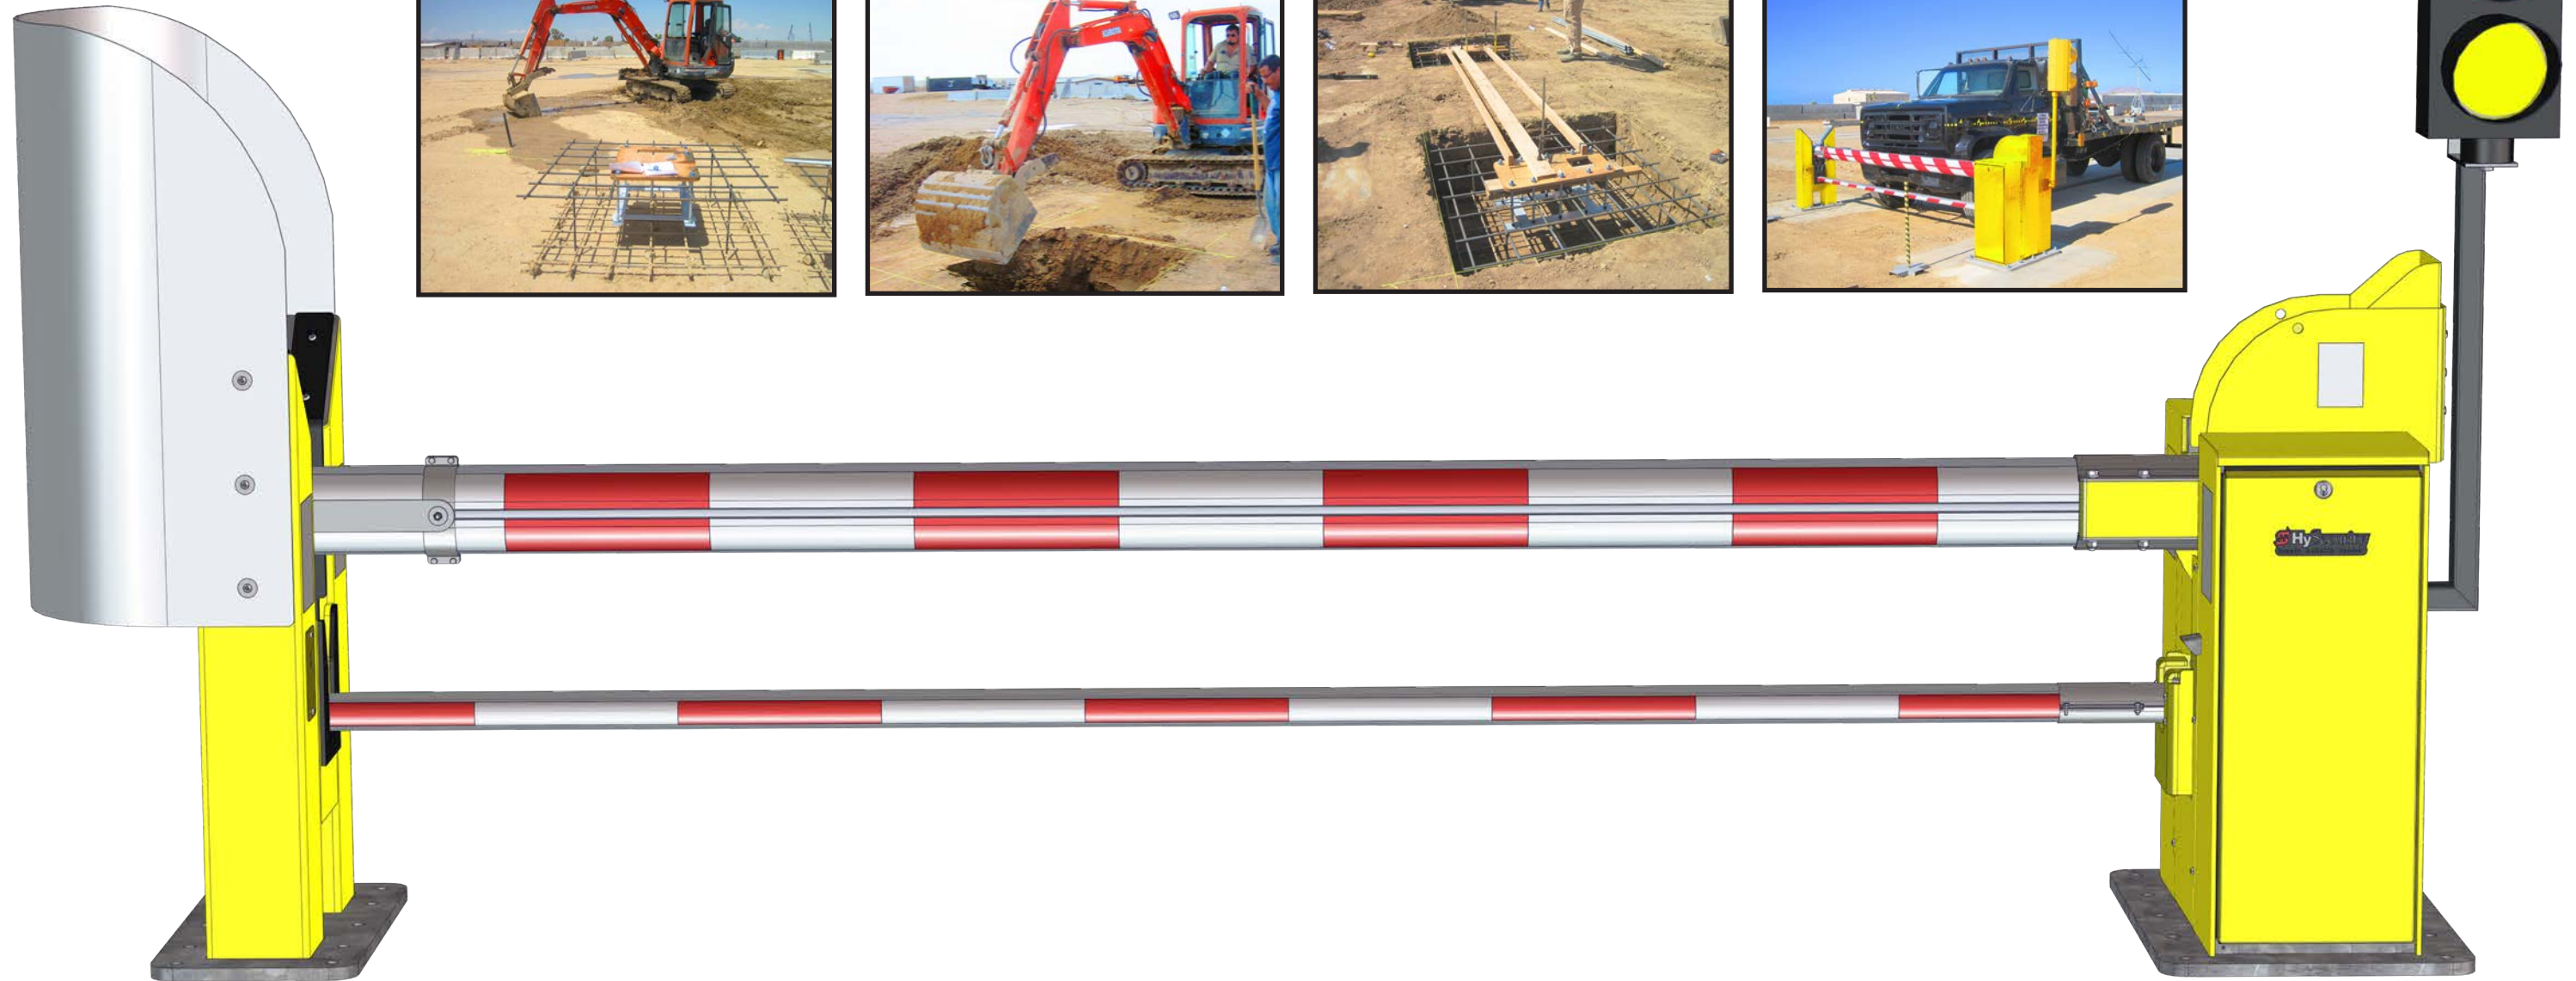

 **HySecurity**<sup>®</sup>

a **Nice** company  
[hysecurity.com](http://hysecurity.com)

**M30 Anti-Ram Barrier Arm Gate (for hardened vehicle access points)**

**Rating: ASTM F2656-07 M30-P1**

Patented dual arm design U.S. Pat. No. 9,822,501 B2 MX3577-01 © 2023

**(This page intentionally blank)**

**IMPORTANT DISCLAIMER!**

All gate installations using HySecurity vehicular gate operators must comply with UL508A and ASTM F2656 safety standards in addition to any local area codes and standards. Site, gate hardware, usage class, and other conditions will dictate the use of additional safety designs and components. All safety related warnings and notices in this document, and any diagrams, drawings, photographs and similar content should not be considered guidance on how to make your particular site safe and code compliant. It is the responsibility of the gate system designer, installer and owner to assess appropriate safety design considerations, correct implementation and ongoing maintenance of any system.

Minimum Clearance for accessibility: 2 feet (61 cm)

**1**

**Read & Plan**

Read and follow the Important Safety Information provided in the Programming and Operations Manual prior to installing the StrongArm M30™ Crash Rated Fortified Barrier Arm. Review these installation instructions and make sure to conform to site specifications and all local and federal regulations and codes.

NOTE: No loops are required for the StrongArm M30-NP. Refer to the last page for more information.

**2**

Measure the clear opening. Use the templates provided to align conduit and determine placement of the posts. Turn this page over to view Assemble and Align and Mark instructions.

NOTE: If you are installing a StrongArm M30-NP, no loops are required. Ignore step 3.

**3**

**Design Vehicle Loops**  
If automatic close is desired, a RESET and one other loop (IOLD or OOLD) is required.

Three loops are preferred:  
RESET, IOLD, OOLD (Free Exit, optional)


Dimensions:

A = 6 to 16 feet (183 to 488 cm)    B = 6 to 8 feet (183 to 244 cm)

C = Maintain 4 feet (122 cm) between loop & edge of roadway

D = Maximum distance is 5 feet (152 cm). Vehicle must move from one loop to the next without loss of detection.



NOTE: If tailgating is a concern, dimension "B" may be reduced to 3 ft (91 cm), but detecting high bed vehicles will be substantially impaired.

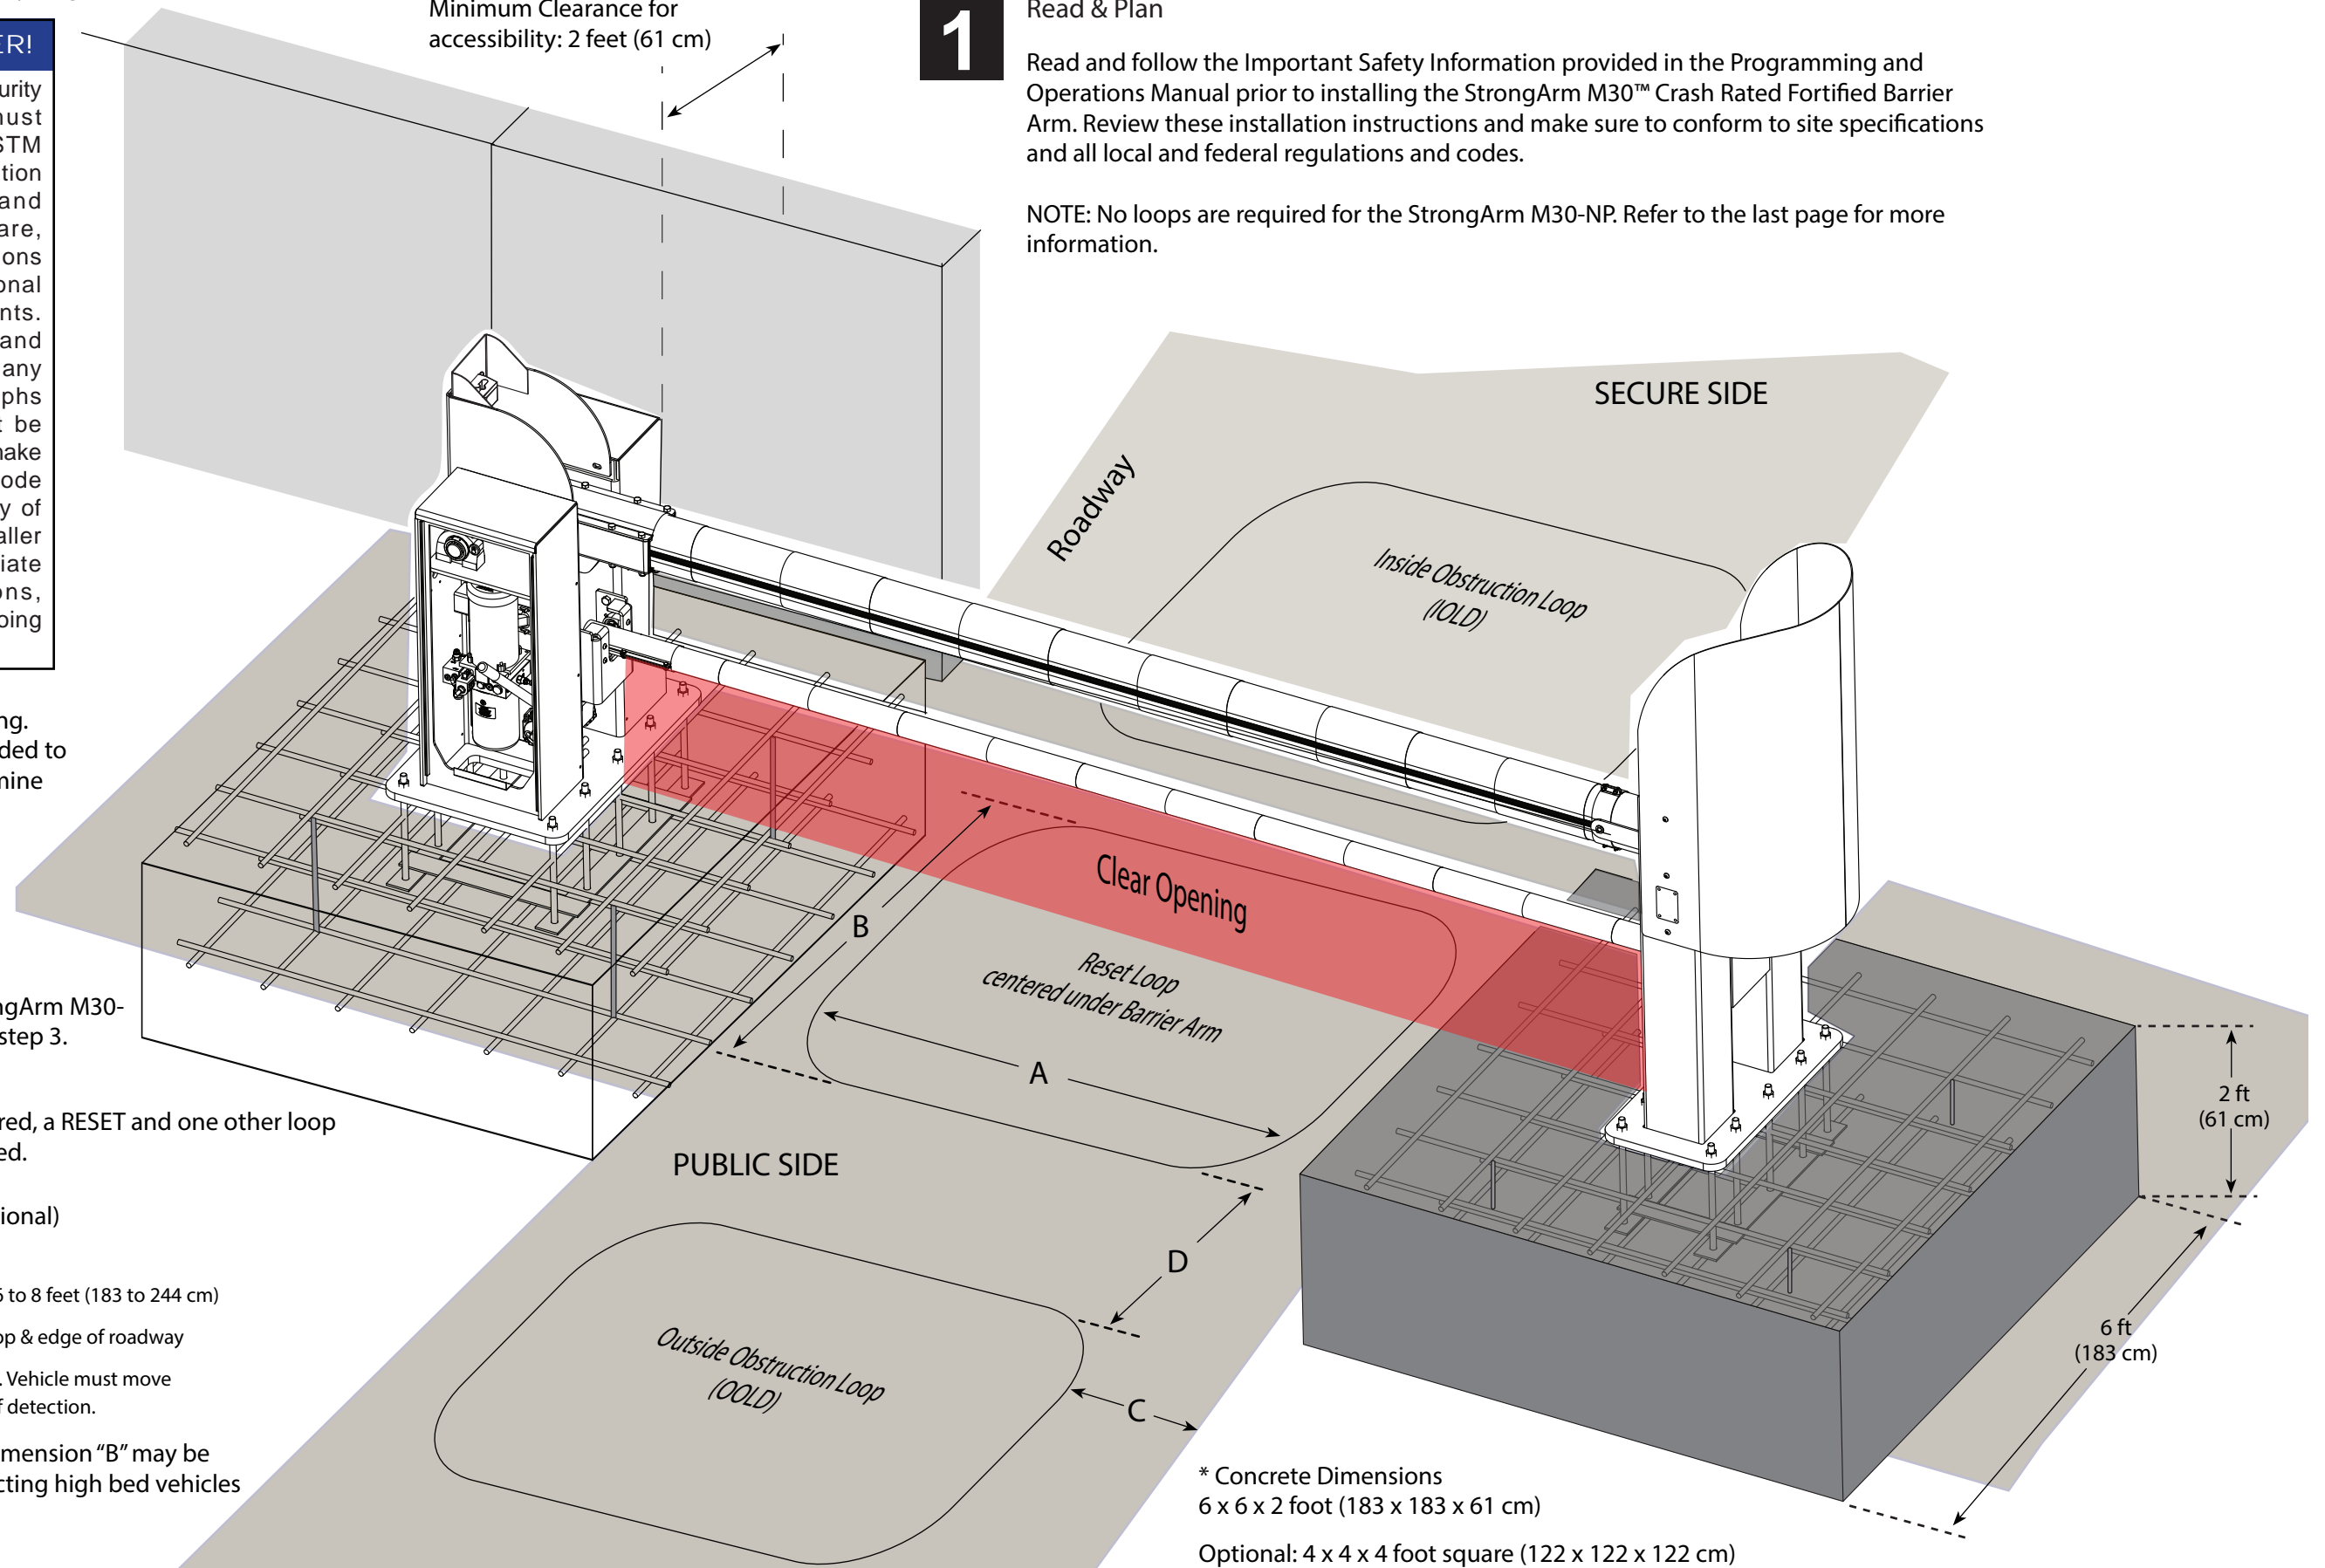

\* Concrete Dimensions  
6 x 6 x 2 foot (183 x 183 x 61 cm)  
Optional: 4 x 4 x 4 foot square (122 x 122 x 122 cm)

# M30 Assemble & Align & Mark

TEMPLATE LAYOUT: 6 x 6 x 2 FOOT AND 4 x 4 x 4 FOOT

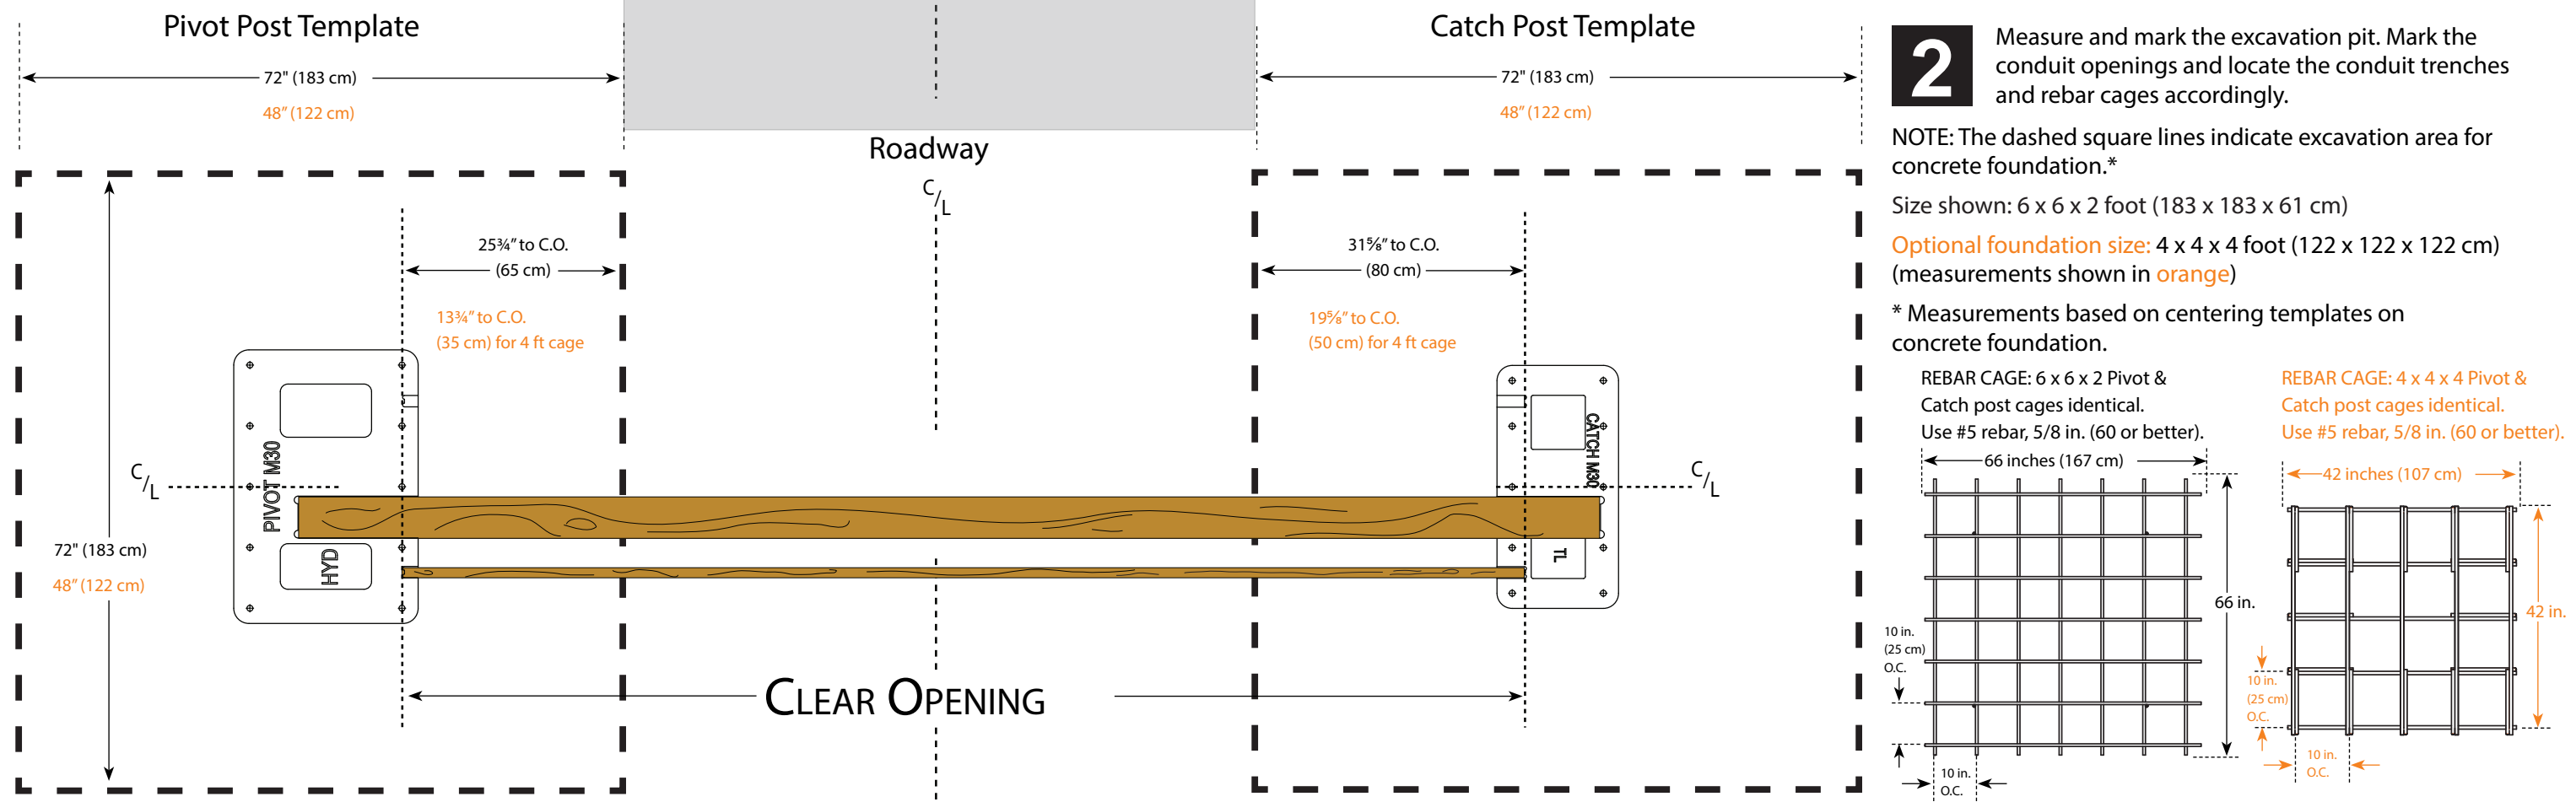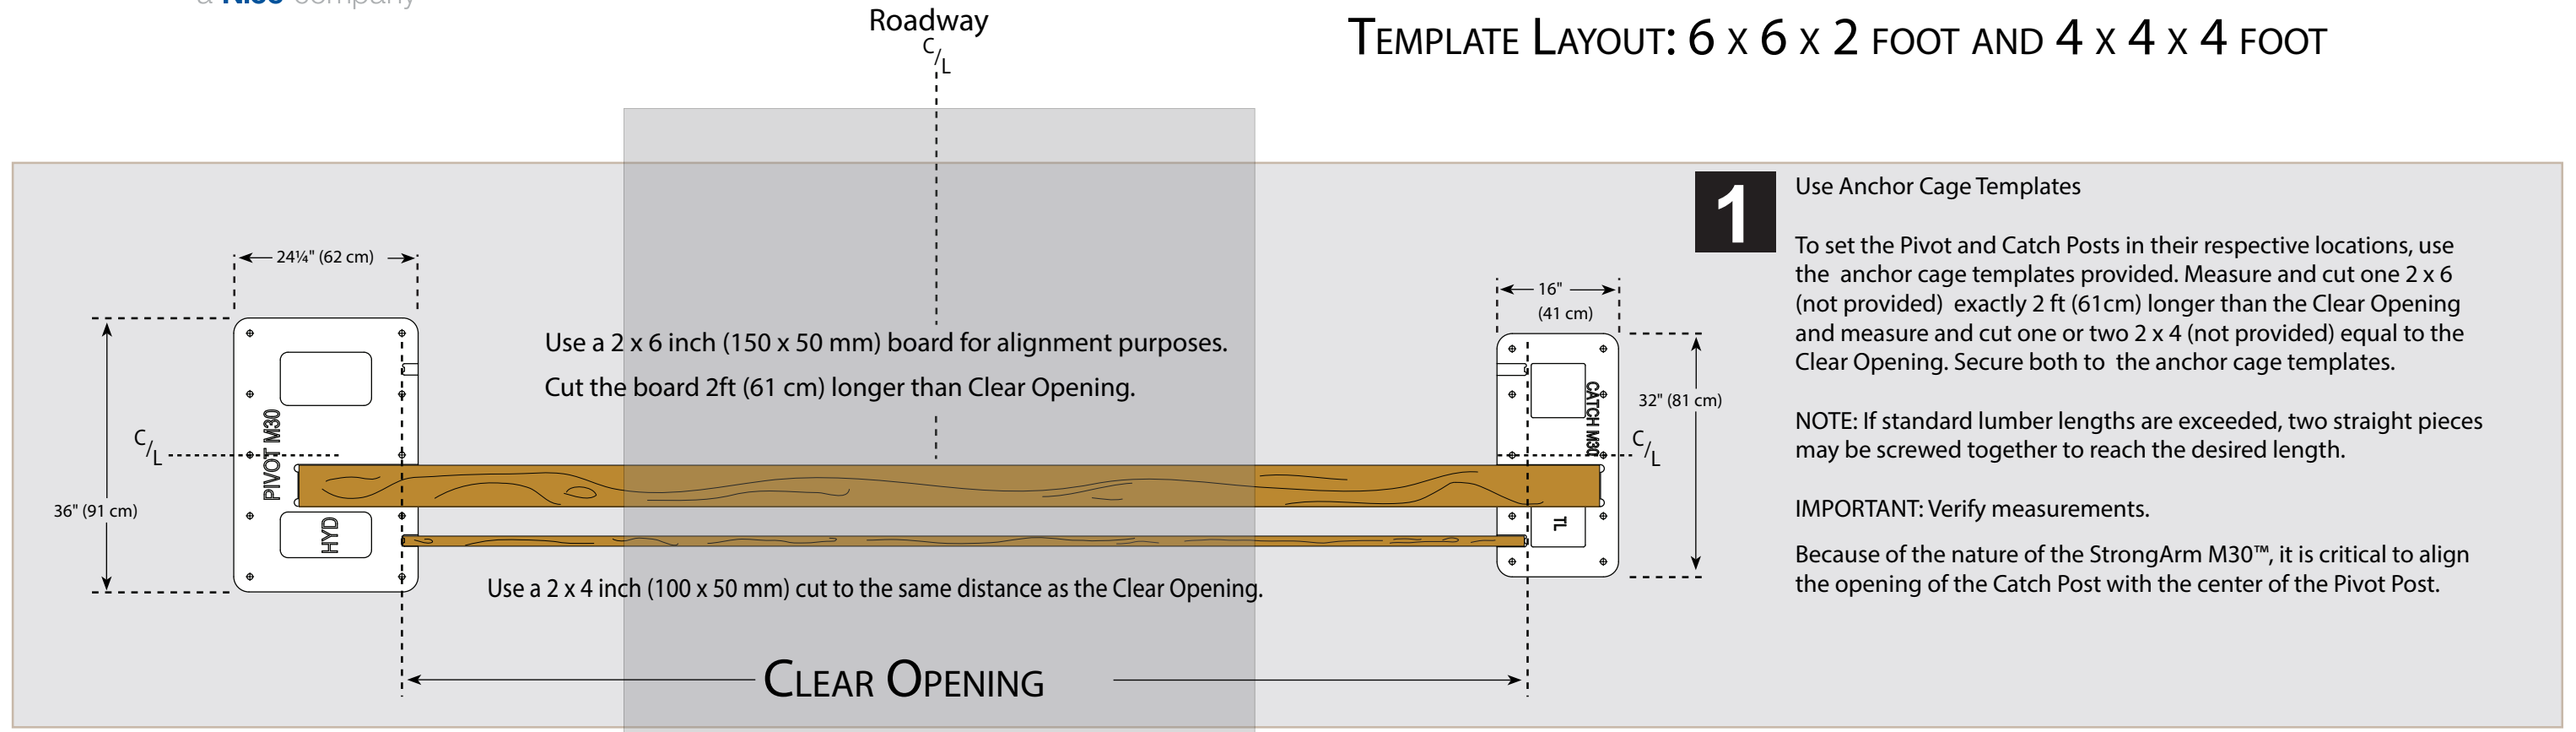



# M30 Install Foundation


**1** To ensure the stability of the StrongArm M30™ Crash Rated Fortified Barrier Arm, the foundation must be constructed in accordance with the following guidelines:

- Excavate a hole for the foundation to house the rebar mats and anchor bolt assemblies. Soil compression under and around the foundation shall be compacted to a soil density of 95% of standard proctor (ASTM-698). See table in Step 3.
- Add gravel where necessary to ensure a solid soil base. Soil must be stable and adequate to support the weight of the foundation.


NOTICE: Softer soils require a larger footing. Employ the services of a structural or civil engineer for site specific considerations. In Northern latitudes, consider the frost line.



Soil Density compacted to 95% per ASTM-698

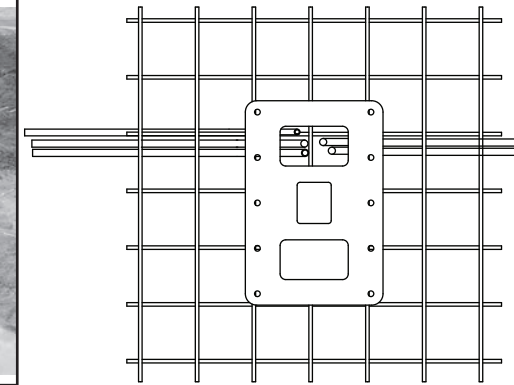

Plan View: Pivot Post Template

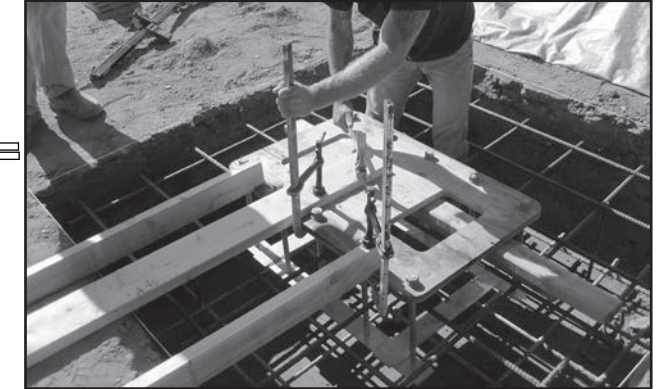

Aligning Rebar & Anchor Cage

**2** Measure and lay conduit for communication and power: (See page 9 for M30-NP)  
 \* NOTE: Catch post junction box has 1/2 inch opening / female thread.

Minimum conduit required	No.	Min. Size	cm
AC Main power	1	1 inch	2.5
Low voltage power	1	1 inch	2.5
Earth Ground	1	3/4 inch	2
Vehicle Loop wire	1 ea.	1 inch	2.5


Consider additional conduit to use for:	No.	Min. Size	cm
Dual gate systems / AC power in	1	1 inch	2.5
Dual gate systems / Low voltage power	1	1 inch	2.5
Photo eye, traffic light, Mag Lock options	1	3/4 inch	2
Catch Post Heater * (High Voltage)	1	3/4 inch	2

Lay rebar mat pattern 7 by 7 at 10-inch on center (OC). Use

**3** #5 (5/8 inch) rebar: See page 2 for grade. Purchase 10 lengths of 20 ft. (6m) for each foundation.

Foundation	Cage Rebar	Cut: #5 Rebar	Length	cm
Pivot	Horizontals	28	5 1/2 feet	168
Pivot	Verticals	4	19 inch	48
Catch	Horizontals	28	5 1/2 feet	168
Catch	Verticals	4	19 inch	48

**4** Install the anchor bolt assemblies as shown.

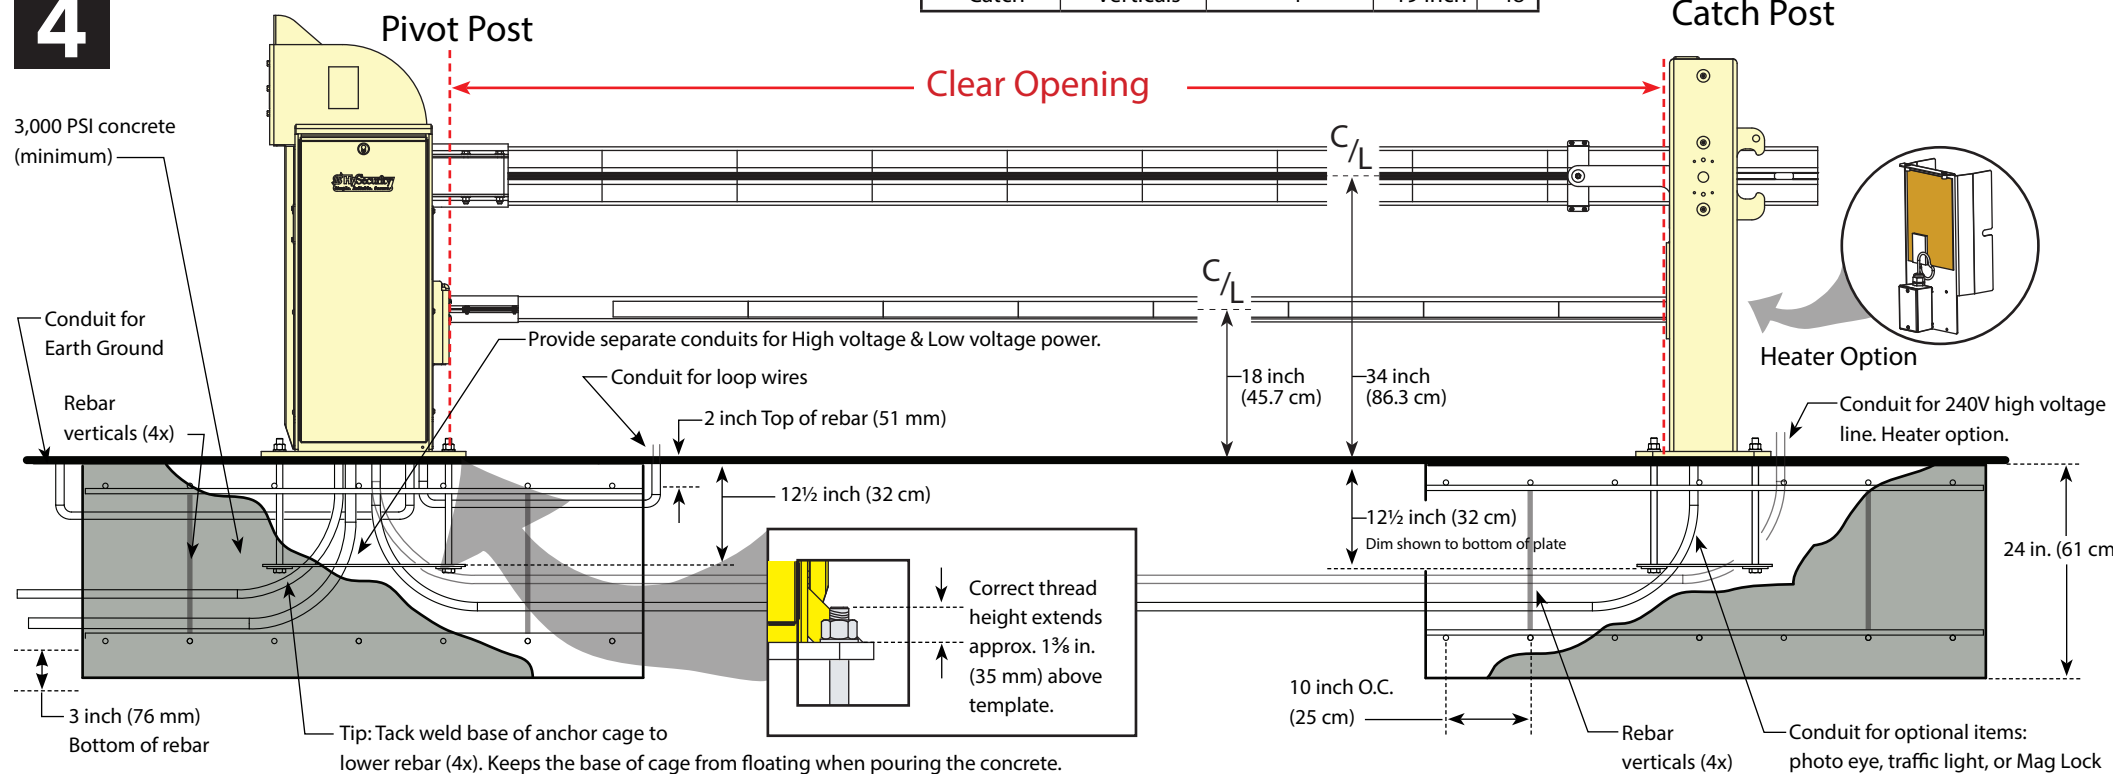


**5** Re-measure and adjust to correct mis-alignment issues.


**6** Ensure anchor cage location is maintained while pouring the concrete. See Tip.

**7** The concrete properties must be, 12ft clear opening with 6'x6'x2' foundation crash tested using 3,000 psi concrete, and all other engineer rated clear openings using 6'x6'x2' foundation calculated with 4,000 psi concrete\*.

\*See other engineered foundation sizes for specific concrete strength required (Reference HySecurity document D0426).

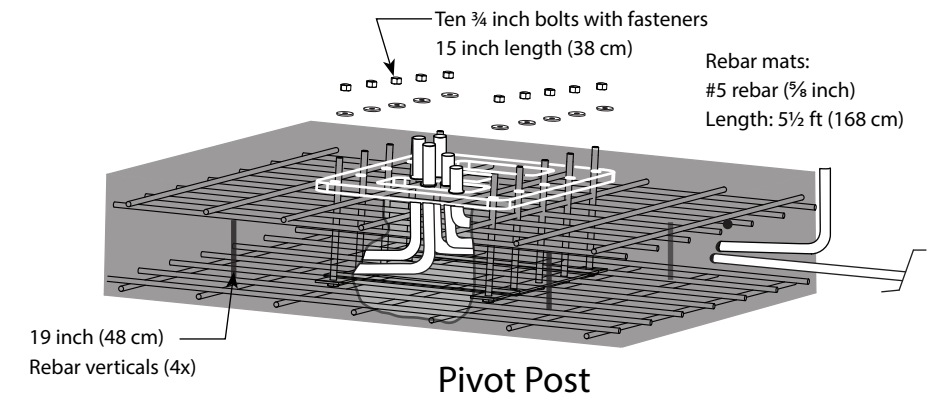

Anchor cages include 10 anchor bolts, washers, and nuts. Foundation dimensions shown: Minimum 6 x 6 x 2 ft (183 x 183 x 61 cm)

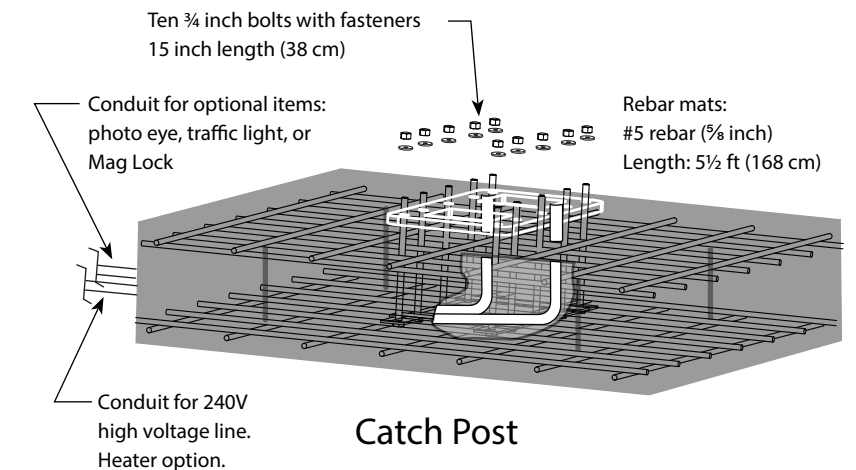


# M30 Install Posts and Ground

**1** When the concrete has sufficiently hardened, remove the templates.

**2** Place the Pivot and Catch posts over their respective conduit and anchor bolt assemblies.

NOTE: Make sure to install the StrongArm M30 Crash Barrier Arm on a level surface. Both pivot and catch posts must be plumb, level and on grade with the roadway surface. Slope drainage ¼-inch per foot within 2 feet of the operator (2 cm per meter).

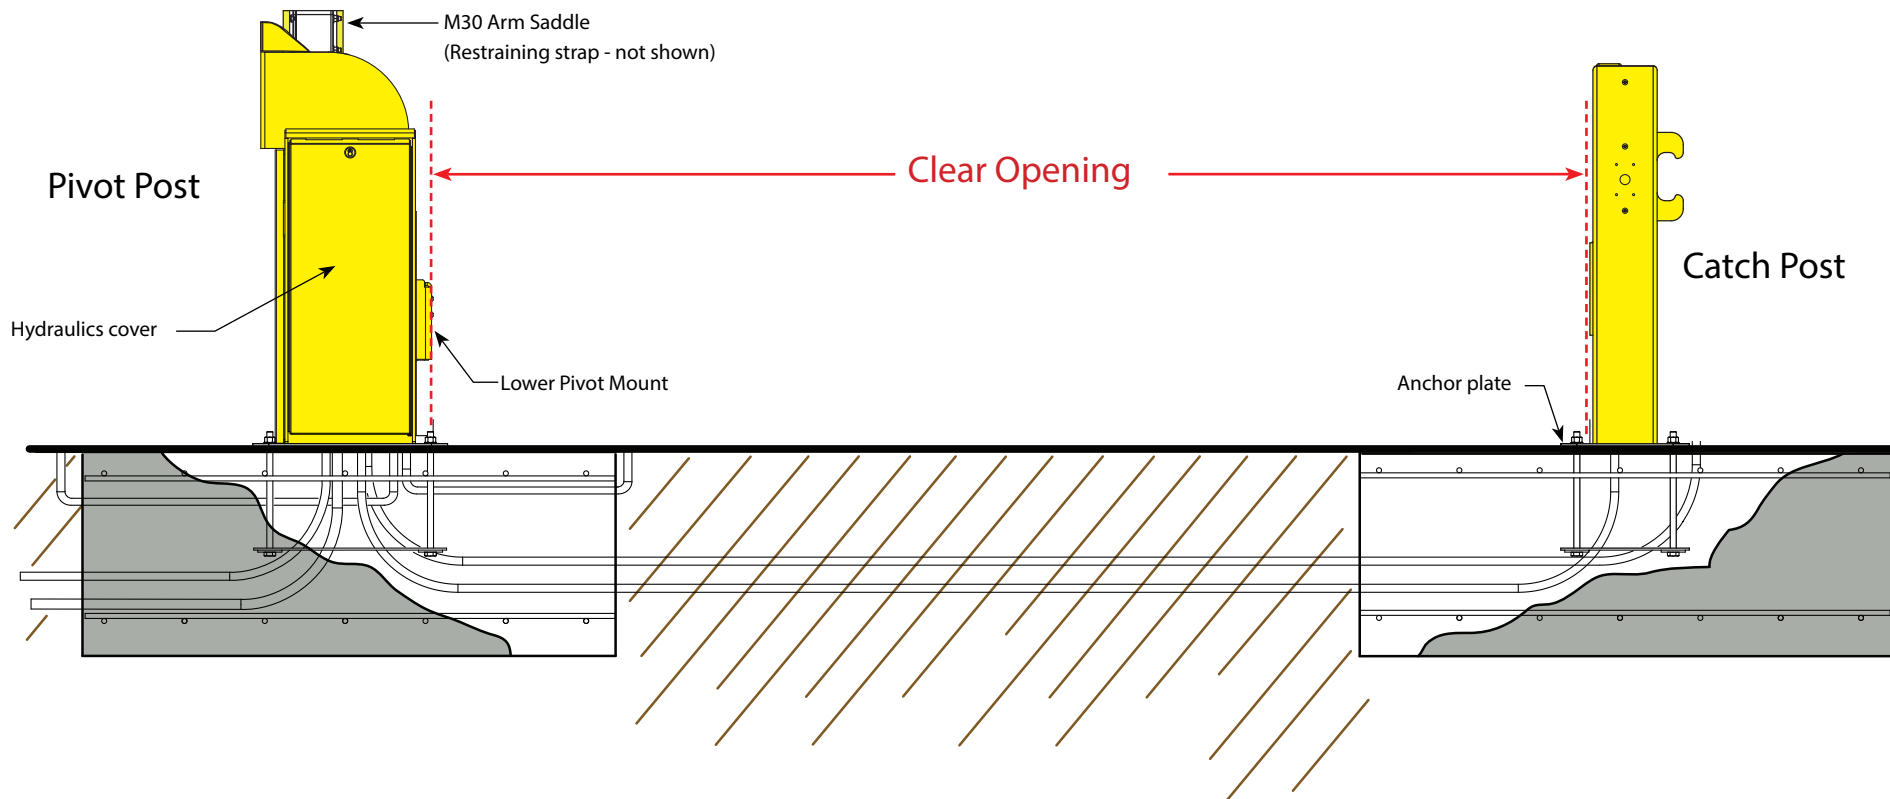


**3** Ensure the posts are plumb. Shim or grout as required.

**4** To secure each anchor plate with the ten washers and nuts provided for each post, use a 1¼-inch socket and torque wrench. Torque to 200 ft · lb (271 N·m)

**5** Install the grounding rod per local building codes.

**6** Attach a large earth ground wire (6AWG) from the grounding rod to the lug nut on the chassis. Feed the 6AWG wire from the chassis to the earth ground rod.

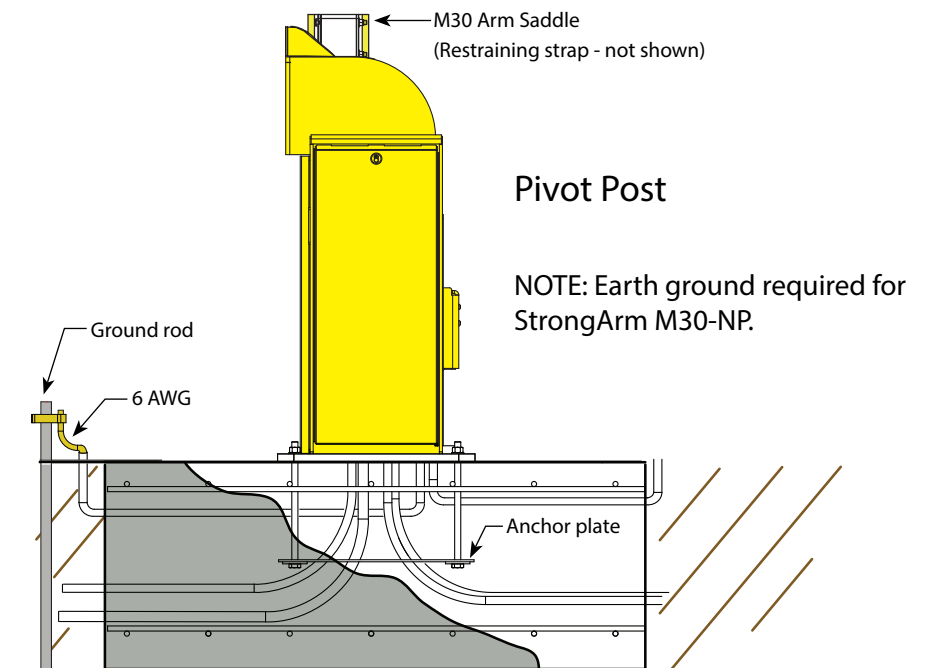

**! DANGER**

The potential for lightning discharge exists with all gates, barrier arms, fences, and gate operators. National Electric Code (NEC) requires a separate earth ground in addition to the required equipment ground.

For earth grounding requirements in the U.S.A., refer to the National Fire Protection Association (NFPA) 780 - Standard for the Installation of Lightning Protection Systems.

Highlights of the standard include:

- The ground rod must be UL listed copper-clad steel, solid copper, hot-dipped galvanized steel, or stainless steel. Minimum requirements: ½ inch (13 mm) diameter and 8 feet (244 cm) in length.
- The ground rod is driven into the earth (refer to local codes for proper depth requirements).
- The ground rod is electrically bonded to the chassis with a single length of un-spliced 6AWG copper wire less than 3 feet (91 cm) long. Due to the large concrete foundation, make the necessary adjustments to accommodate for earth ground requirements.
- Local jurisdictions may impose additional or different requirements above the NEC and NFPA 780. Consult the local codes and regulations regarding requirements in your area.

NOTICE: Properly grounding the gate operator is critical to gate operator performance and personnel safety. Equipment containing electronics may benefit when the earth ground discharges excessive voltage. Use sufficient wire size during installation. If you do not ground the operator with a separate earth ground rod, you risk voiding the Limited Warranty.


# M30 Assemble Barrier Arms

**1** Mount the Lower Pivot Assembly (comprised of the lower arm and bearings) into the Pivot Post enclosure and secure the bearings to the Lower Pivot Mount with the four buttonhead screws.

**CAUTION**  
Prevent potential injury! Remove the Lower Catch Pin BEFORE installing the Lower Arm. If it is not removed, it may slide out of the Lower Arm during installation and drop onto personnel or equipment.

Loosen and remove the four button head screws from the bearings prior to installing the lower arm.  
Tool: 7/32-inch Hex key

**3** Loosen, but DO NOT remove, the six bolts and nuts on the Lower Pivot Assembly.  
Tools: 7/16-inch wrench plus 7/16-inch socket wrench

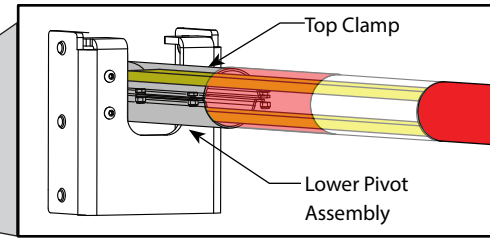

**4** Slide the Lower Arm to obtain 3/4-inch clearance at the Catch Post.

**5** With the gap clearance set at approximately 3/4-inches between the Lower Catch Pin and Post, securely tighten the top clamp (see step 3) on the Lower Pivot Assembly.

**Pivot Post**

Restraining strap not shown

Hand pump

Lower pivot assembly

Bearings

Lower pivot mount

M30 Arm Saddle

**2** Rest the Lower Arm on the Catch Post, and then use the manual pump handle to lower the M30 Arm saddle into a horizontal position.

NOTE: StrongArmM30-NP (no power) operation is shown on page 9.

**CLOSE Arm**

1. Seat and lock handle into base.
2. Pump handle until arm is horizontal and level.

**Manual Operation**

**OPEN Arm**

1. Seat and lock handle into base.
2. Open valve. Pull out (1) and twist (2). Release.

NOTE: Make sure valve does not reseat itself.

3. Pump handle until arm opens fully.
4. Close valve. Pull out (1) and twist (2). Release and reseat valve.

Lower Catch Pin

3/4-in. (2 cm) gap

3/4-in. (2 cm) gap


Bumper for M30 Arm

Overhead View  
Lower Catch Pin



# Install M30 Arm


**1** Loosen and remove the ten top clamp fasteners from the M30 Arm Saddle. Set the top clamp and eight fasteners aside.

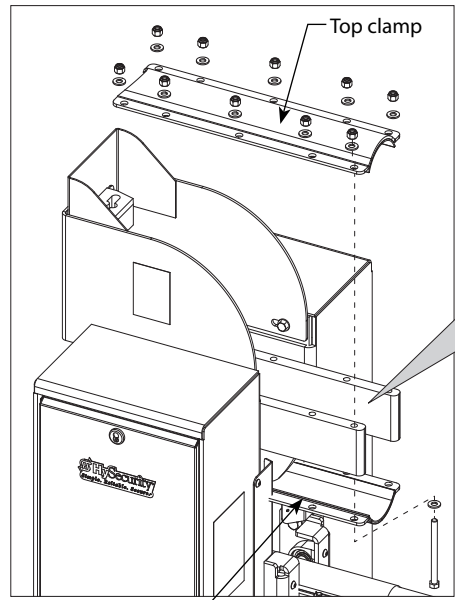

Bottom Clamp  
For clarity: Restraining strap and nine bolts with washers are not shown.

**2** To stabilize the bottom clamp, return two bolts and nuts/washers to the front edge of the saddle. Keep the bolts loose while installing the straps and aligning the upper catch pin.


Tools:  
3/4-inch box-end wrench  
1/2-inch drive ratchet with 12-inch extension and 3/4-inch socket

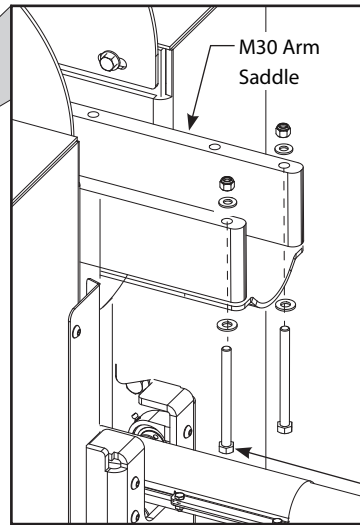

The M30 Arm is very heavy. Use proper lifting techniques and obtain assistance to install the M30 Arm.


**3** To install the upper arm, you need access to the upper pivot pin. Remove the side panels, rear cover and rear panel.

Tools: 7/16 inch socket wrench

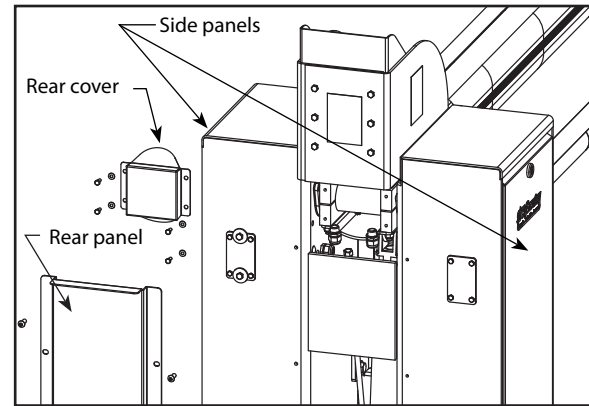


**5** As you slide the Upper Catch Pin through the end of the M30 Arm, place the two strap loops around the Upper Catch Pin.

Tip:  
For leverage, stretch the strap using a 2 x 4 (100 x 150).

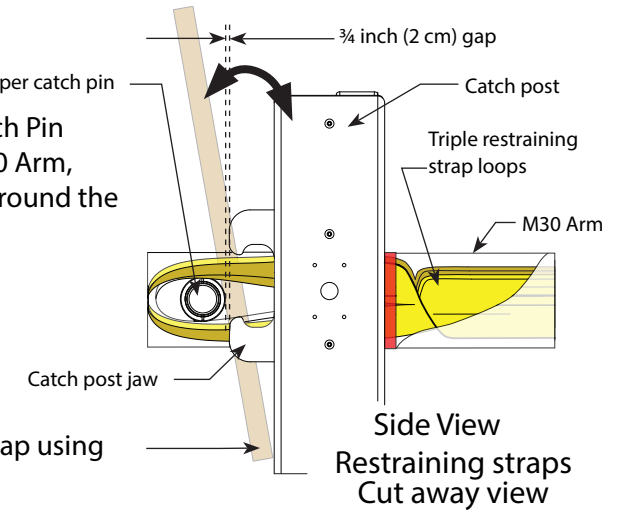


M30 Arm Saddle  
Cut away view

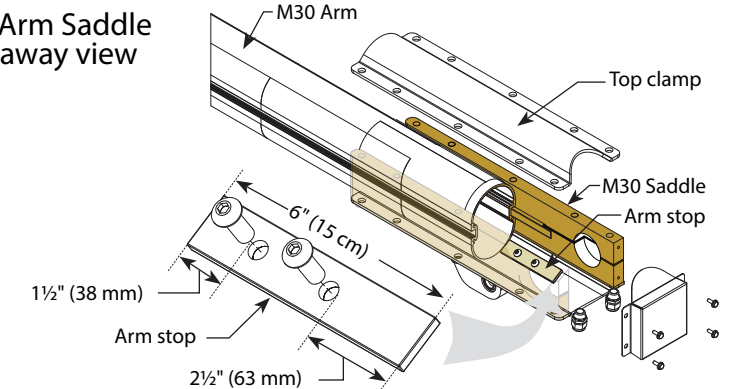

**4** To support its weight, rest the M30 Arm on the Catch Post's bumper. Ask for assistance and feed the pivot pin through the restraining straps.

Use a 3/16-inch hex key to loosen the 4 set screws (2 on each bearing).

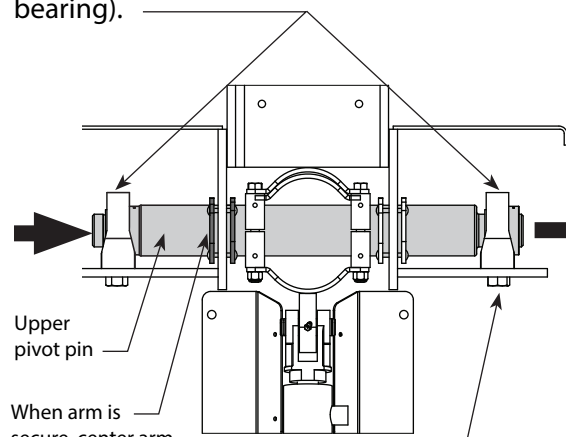

Upper pivot pin  
When arm is secure, center arm in saddle. Make slight adjustments, using a 7/16-inch socket wrench. Loosen 2 nuts on interior flange.


Rear View

Bearing screws  
Use a 15/16-inch box end wrench.

Use a 15/16-inch box end wrench to remove the fasteners that secure one bearing.

Then, ask an assistant to push on the opposite end of the upper pivot pin while you slide it out and clear the opening between the saddle.

Place the restraining strap eyes around the upper pivot pin and slide the pivot pin back in place. Replace the bearing and tighten the 2 fasteners to 50-75 ft-lbs (68-102 N-m) final torque in later step. (use blue medium strength thread locker on set screws). The pivot pin has a groove on one end for set screws, make sure set screws line up with the groove, if that bearing was removed. Re-tighten the 4 set screws.

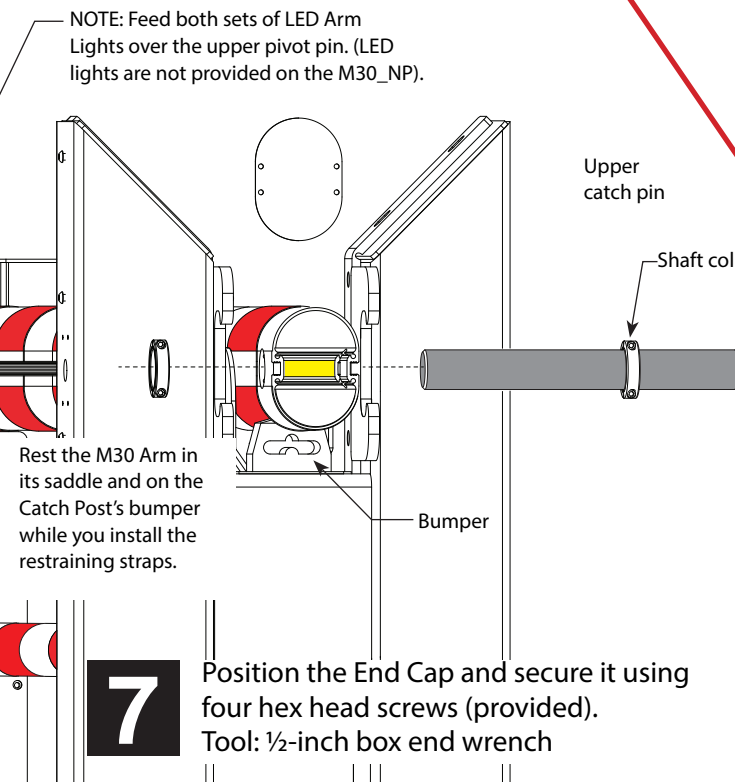

Rest the M30 Arm in its saddle and on the Catch Post's bumper while you install the restraining straps.


**7** Position the End Cap and secure it using four hex head screws (provided).  
Tool: 1/2-inch box end wrench

**8** Loosen, but do not remove, the 4 bearing screws.

Center the M30 Upper Arm between the catch posts.  
With the upper arm centered and aligned, tighten the bearing screws (4x) and 4 nuts on the interior, against the chassis.  
Torque to 150 ft-lb (203 N-m).

- Position arm in M30 Saddle.
- Set 3/4" gap between shaft collar and catch post jaw.
- Adjust arm stop.
  - ♦ Remove the arm stop
  - ♦ Flip it, if needed
  - ♦ Cut to measure
  - ♦ Re-install it to prevent M30 arm slip.

Tools: 7/32-inch Hex key

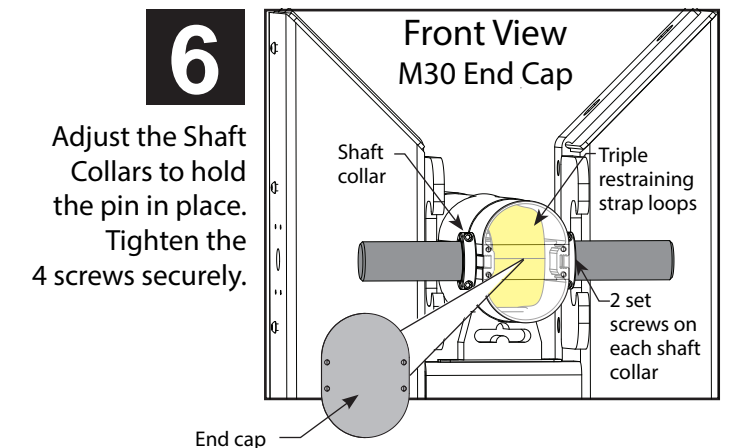


Adjust the Shaft Collars to hold the pin in place. Tighten the 4 screws securely.

End cap




# M30 Link Arms & Install Light

**1** With arm aligned in the saddle, make sure the two LED Arm Lights cable are routed over the pivot pin, and then secure the Top Clamp with 10 bolts and fasteners.

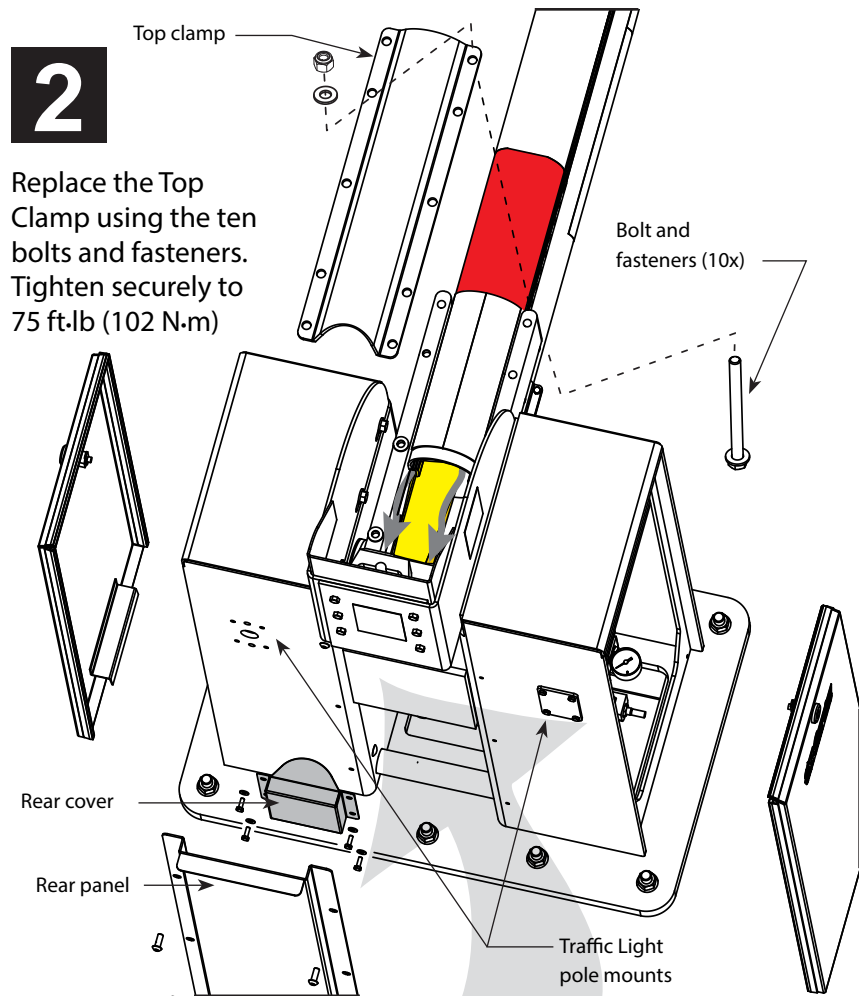


**CAUTION**

To preserve LED Arm Lights cable integrity and allow for arm movement, maintain a minimum length of 12 inches (30 cm) between the strain reliefs. If the cable loops are not maintained, you risk damaging the cables and voiding the Limited Warranty.

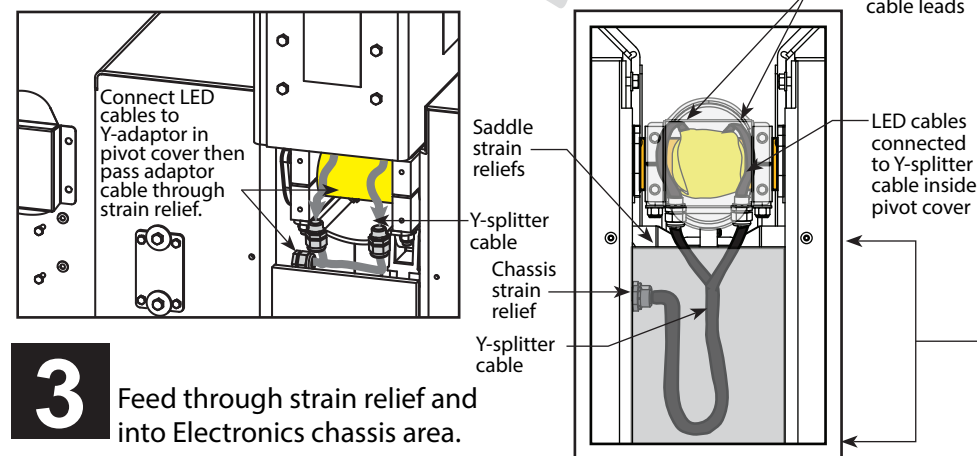

**3** Feed through strain relief and into Electronics chassis area.

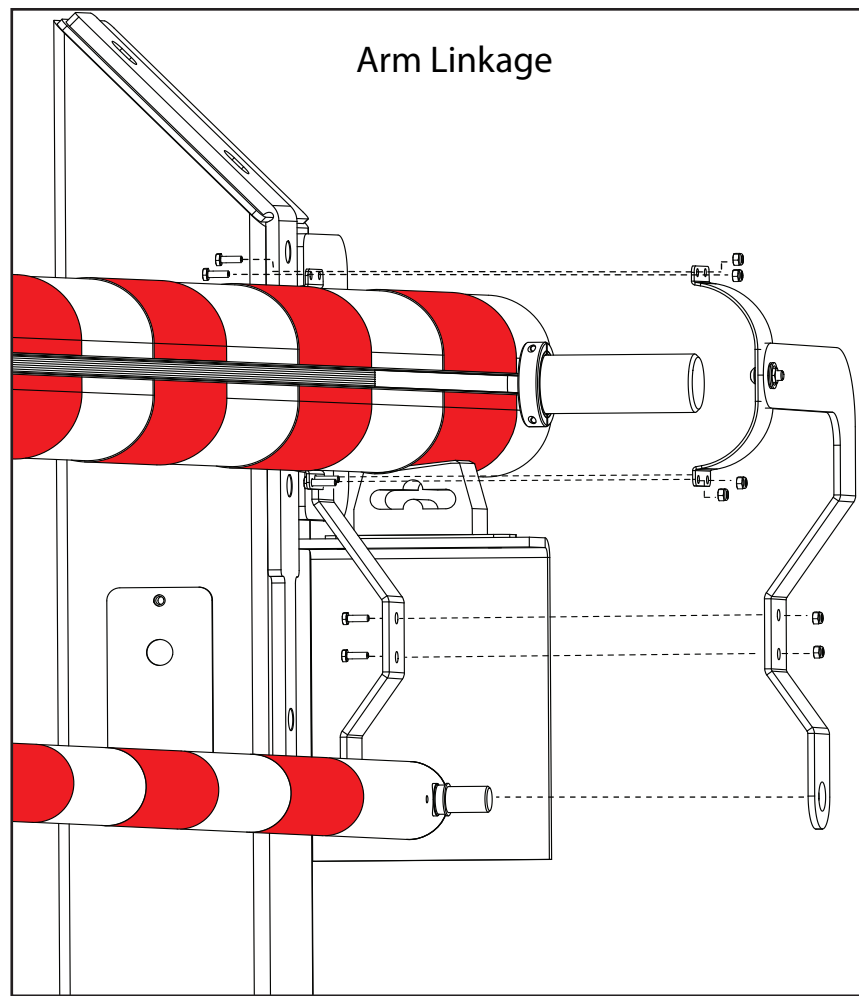


**4** Assemble the Arm Linkage as shown in the illustration. Tighten the fasteners securely. Tools: Two 7/16-inch box end wrenches and two 9/16-inch socket wrenches.

**Tip:** Ask an assistant to manually raise the M30 Arm so it clears the Catch Post and provides easier access to the Arm Linkage fasteners.

Allow cable slack for arm movement. Provide for a minimum of 12 inches (30 cm) between saddle and chassis strain relief.

- Mounting Hardware:**
- Bolt, 1/4"-20x1-1/4" (MX4170)
  - Lock Washer, 1/4" (MX000207)
  - Washer, 1/4" Flat (MX000706)
  - Kep Nut, 1/4" (MX000703)

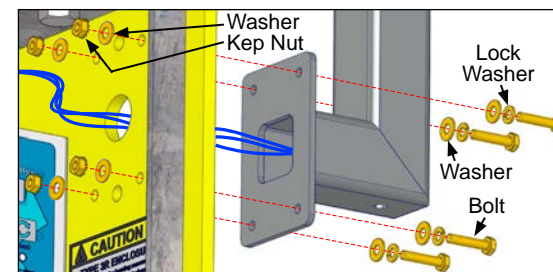


**Install Light Pole to Pivot Post**

**G** Refer to the diagrams (right) to wire the traffic light to the wires from the STC. Match colors and connectors. **H** Determine desired behavior of the arm lights and set in STC menu to **A0 (FLASHING)** or **A1 (STEADY ON)** (see right).

**Assemble and Install Traffic Light (P/N MX002728):**

**5** **A)** Assemble traffic light (per image below) in preferred orientation and fill unused holes with grommets. **B)** Punch small hole in large grommet behind light-bracket assembly. **C)** Bundle wires & push through grommet hole into light pole. **D)** Feed wires downward into pole until they can be pulled from pole mount end.

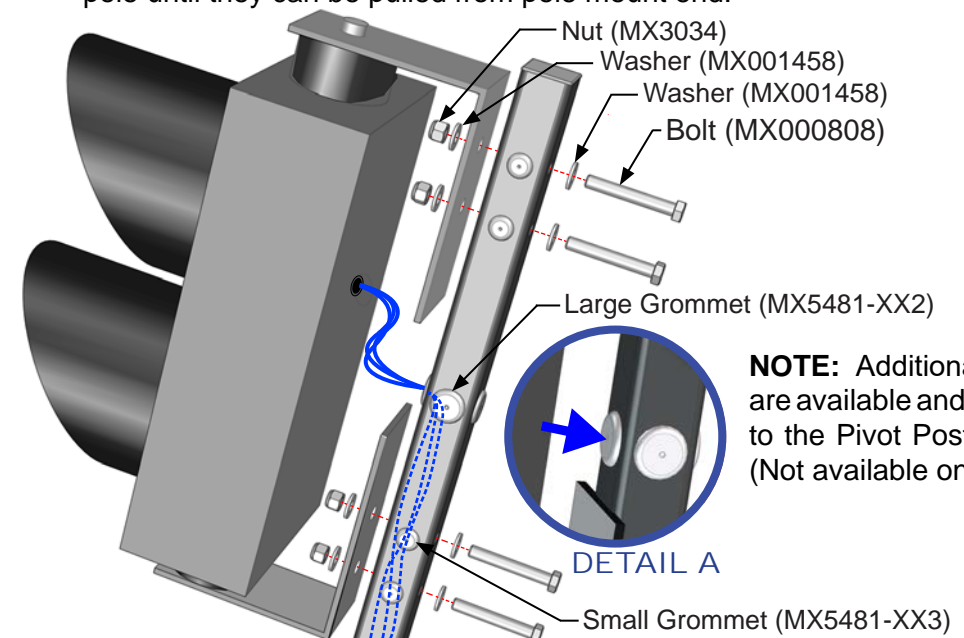

**NOTE:** Additional Traffic Lights are available and can be mounted to the Pivot Post or Catch Post. (Not available on M30/M50-NP.)


**Traffic Light**  
P/N MX002728

**Install Traffic Light to Pivot Post:**

**A)** Select mount location & remove chassis cover on that side. **C)** Use 7/16-inch socket wrench to unfasten cover plate (retain all washers and kep nuts). **D)** Thread wires from pole through center hole and into pivot post interior. If necessary, route wires through supplied conduit between the pivot posts to access the Smart Touch Controller connections.

**E)** Use 9/16-inch socket wrench to install light post as shown using new bolts & lock washers along with retained washers & nuts. **F)** Bundle and tie-wrap wires. Place above the display keypad's white box.

**Connecting Traffic Lights & STC Settings**

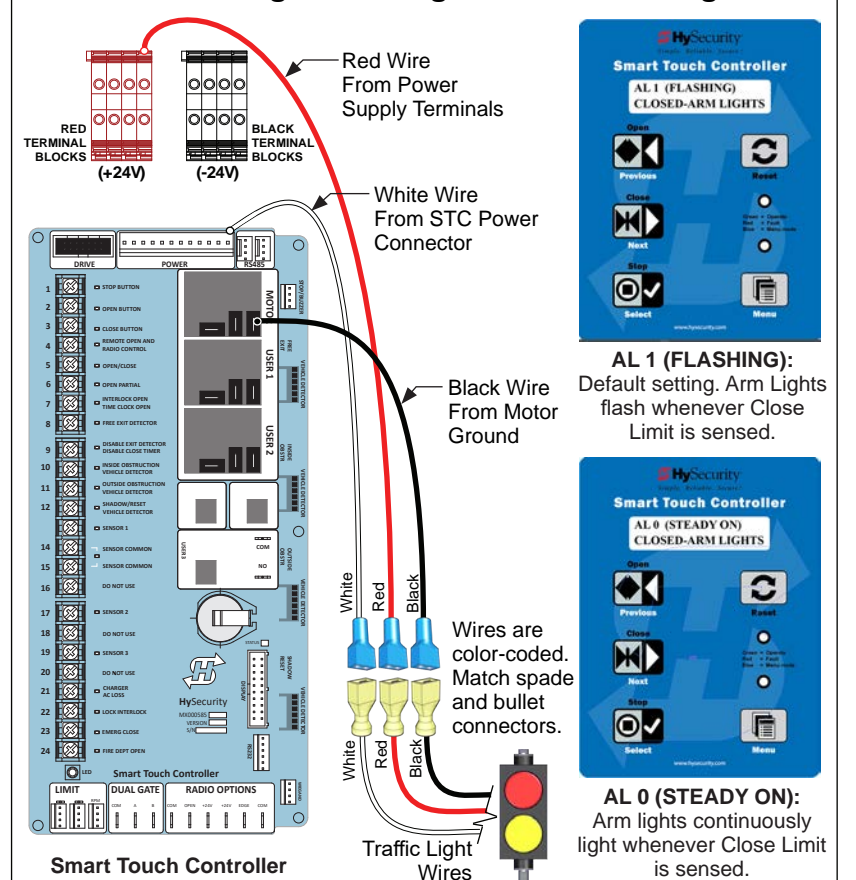

**AL 1 (FLASHING):** Default setting. Arm Lights flash whenever Close Limit is sensed.




**AL 0 (STEADY ON):** Arm lights continuously light whenever Close Limit is sensed.

# M30 Complete the Installation

**! DANGER**

Turn OFF AC power at the source (circuit breaker panel) before accessing the wires in the StrongArm M30 junction box. Follow facility Lock Out/Tag Out procedures. Make sure all power switches are in the OFF position. Follow all electrical code standards and regulations.


**1** Prep for Power: Three wires and a ground are available for connection to a 3 Phase power source (3Ø). Loosen the screws on the power module to open the wire slots at the top and bottom.

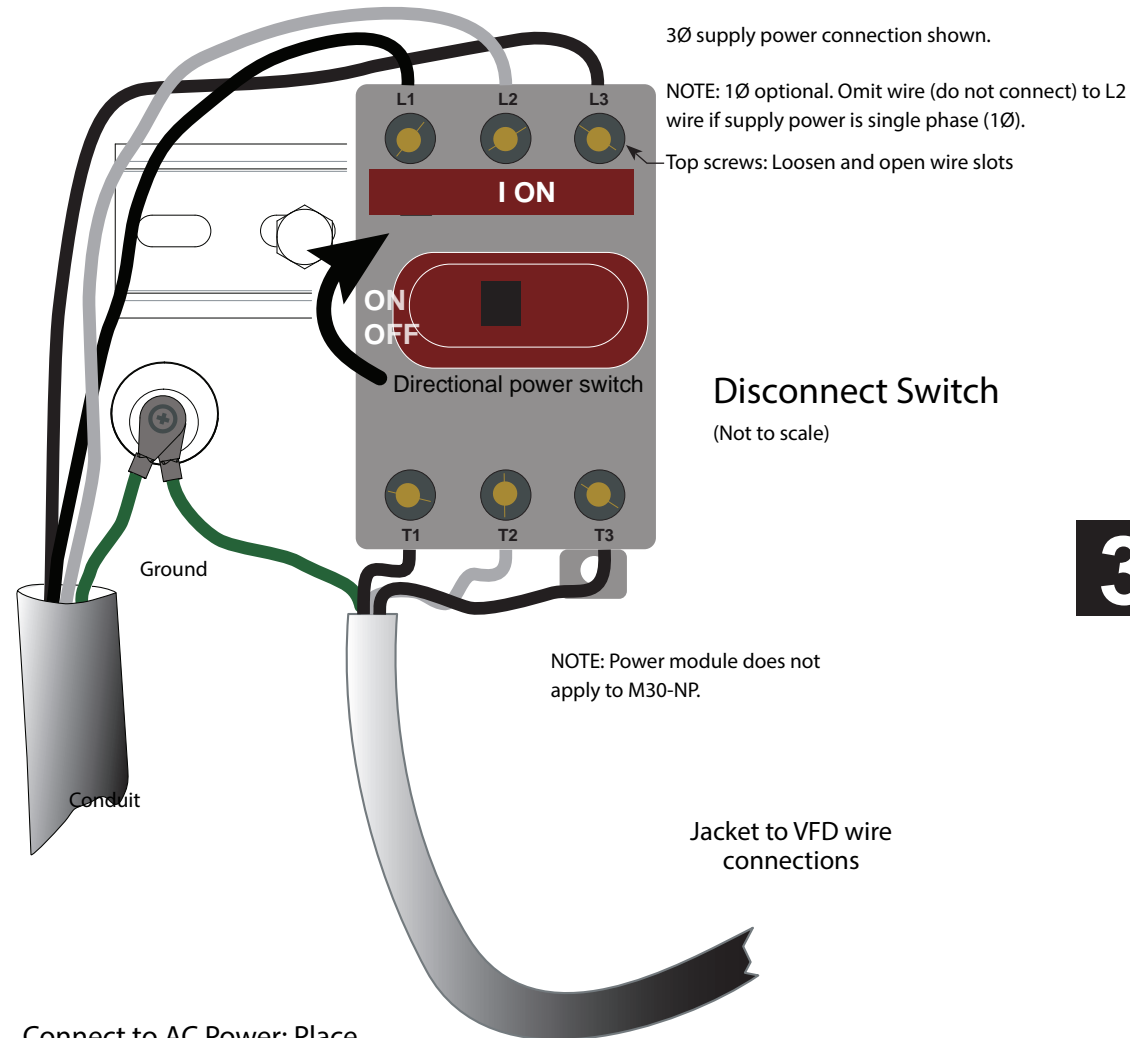

**2** Connect to AC Power: Place the incoming power wires into their appropriate slots. Attach the ground wires to the chassis.


NOTE: Wiring of gate operators must conform to NEC standards and comply with all local codes. When the installation is compliant and complete, turn on AC power at the source and power module.

**4** Remove the Vent Plug.

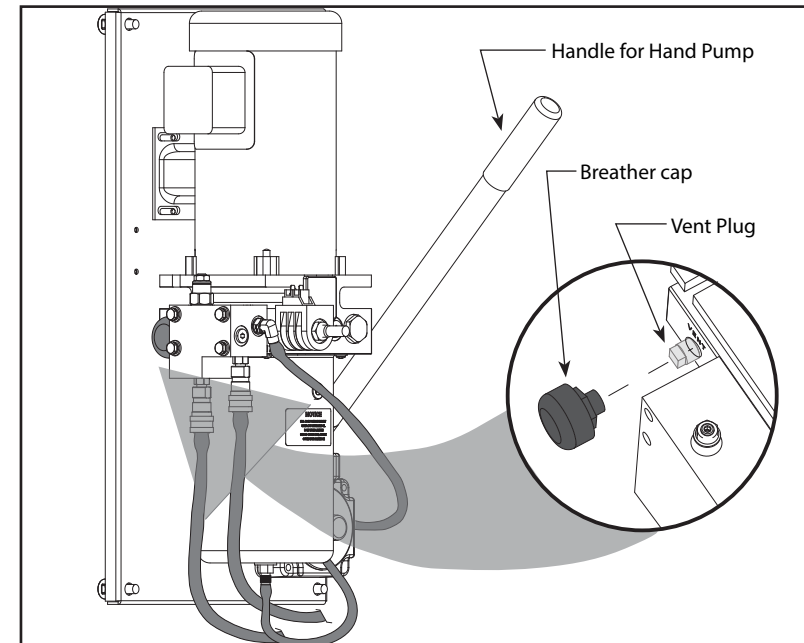

AC powered M30 Gate Operator


**5** Replace it with the Breather Cap.

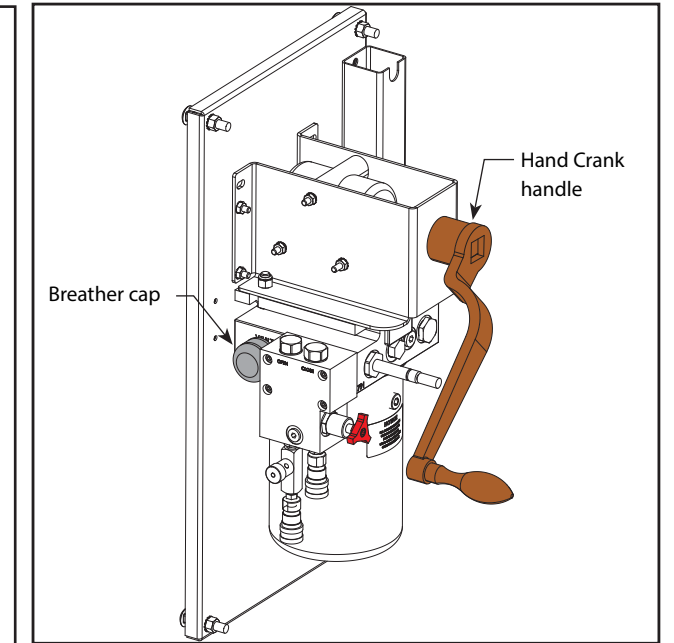

M30-NP (non-powered) Gate Operator

**3** Install entrapment shield: Remove the six socket head screws and fender washers from the Catch posts and use them to secure the Entrapment Shield as shown. (Entrapment shield is optional on the M30-NP)


Tighten all six screws using a 7/32 hex key.

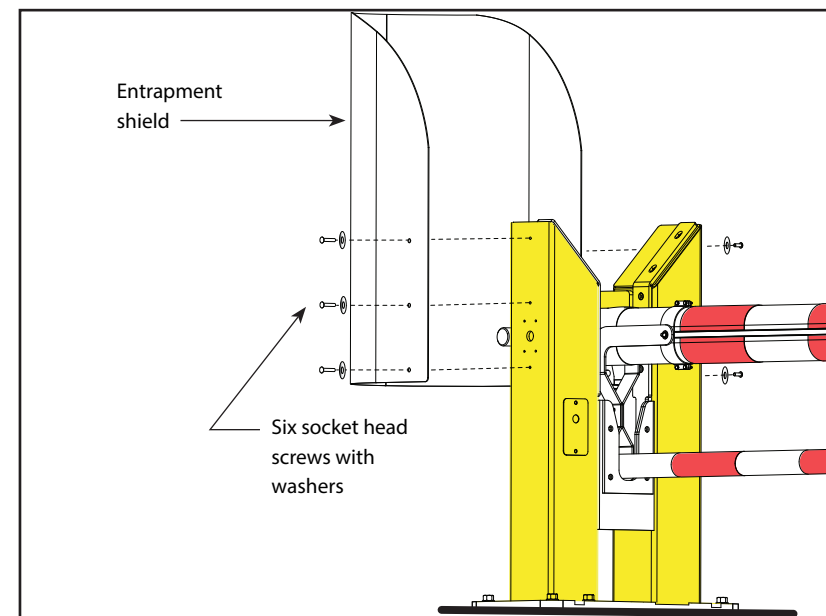

**Torque Requirements:**

Bolt Size (inches)	ft.lb	N.m
¼ - 20	10	13
⅜ - 16	28	38
½ - 13	75	102
⅝ - 11 & ⅝ - 18	150	203
¾ - 10	200	271




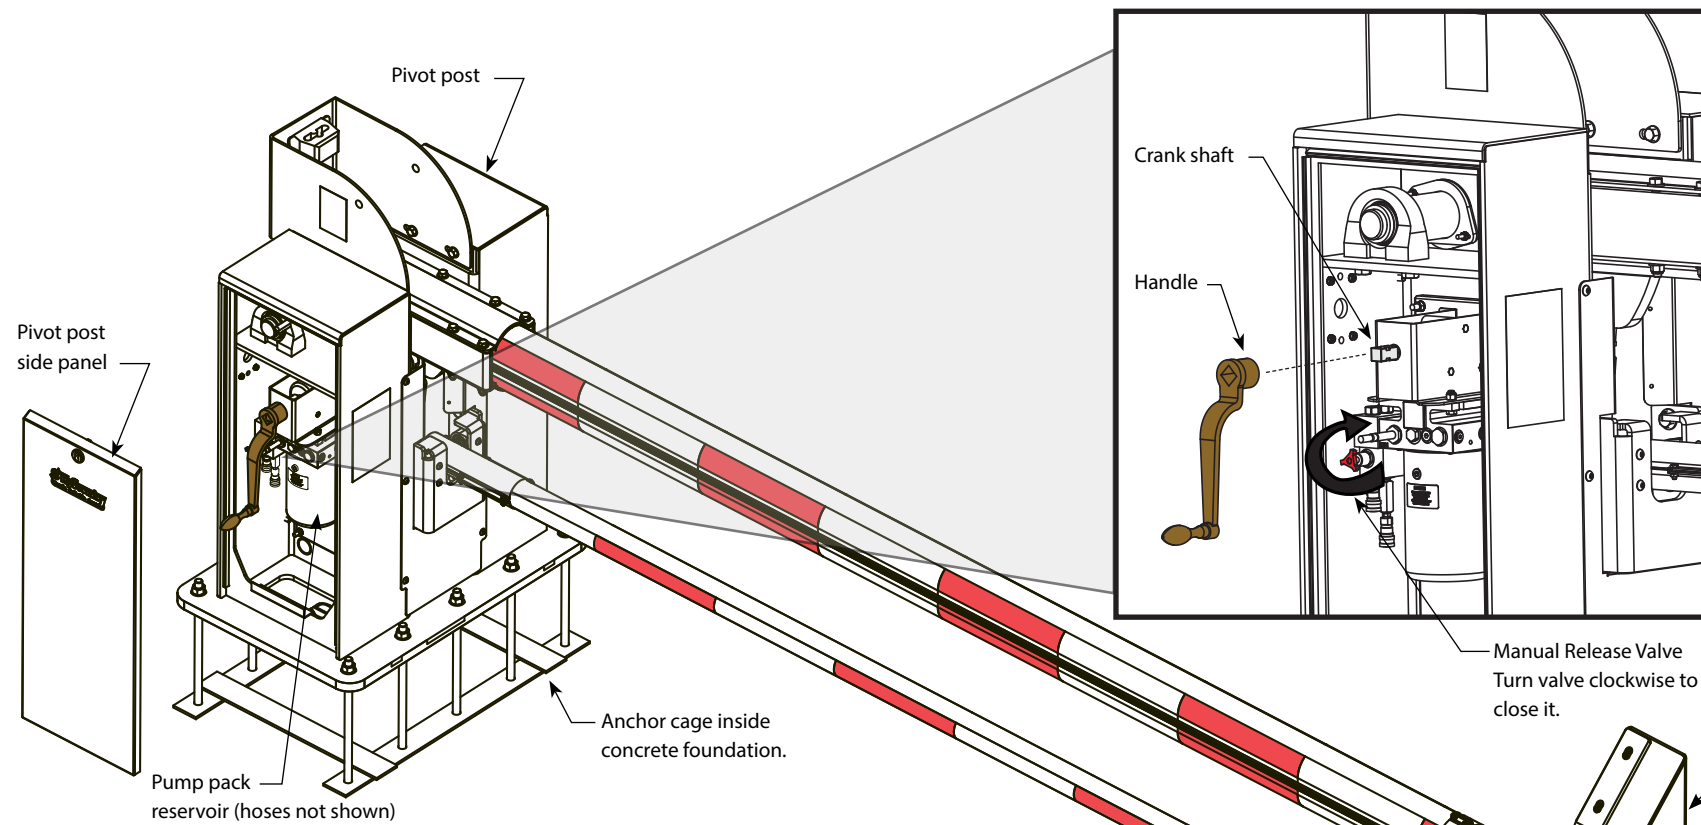

## 1 PREP FOR HAND CRANKING:

Close the Manual Release Valve by turning its red knob clockwise until it stops (about two turns). Do NOT use excessive force once the knob stops turning.

Place the handle onto the crank shaft. (Or, fit a high torque cordless drill with a 1-inch, 12-point socket onto the crank shaft.)

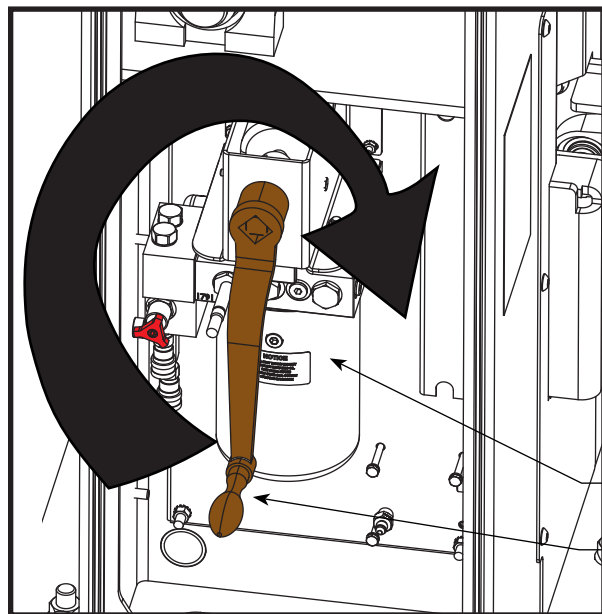


## 2 TO RAISE THE ARM:

Turn the crank handle, clockwise until the arm raises into position.

The arm maintains position when you stop.

Pump pack reservoir  
Handle

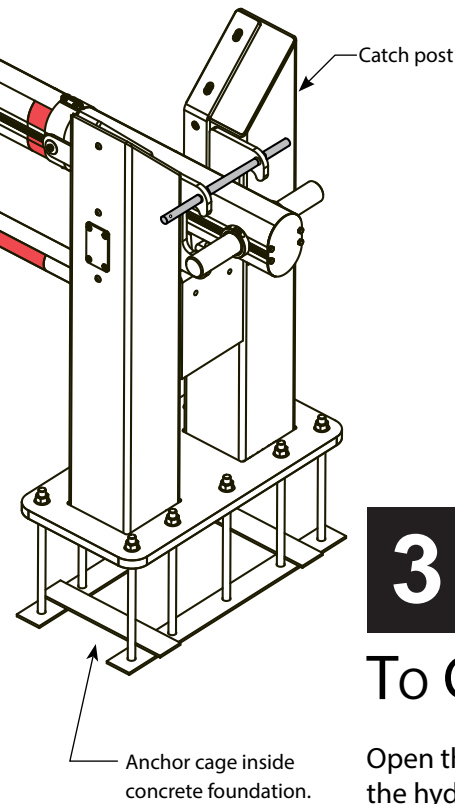

## 3 TO CLOSE THE ARM, USE GRAVITY:

Open the Manual Release Valve by turning the red knob counterclockwise 2 or 3 turns. This allows the hydraulic fluid to flow back to the pump pack reservoir.

As the arm descends, reduce the arm speed by turning the Manual Release Valve clockwise.


Continue to adjust the Manual Release Valve so the arm doesn't close too quickly and bounce as it comes to rest in the catch post. Average closing speed is approximately 20 seconds.

For general maintenance, refer to the StrongArm M30/M50 Programming and Operations Manual.

## RECOMMENDED TOOLS

- High torque cordless drill with 1-inch, 12-point socket (Replaces hand crank. Faster method to open arm.)

Turn Manual Release Valve counterclockwise to allow fluid to flow back to the pump pack reservoir. The arm closes using gravity.

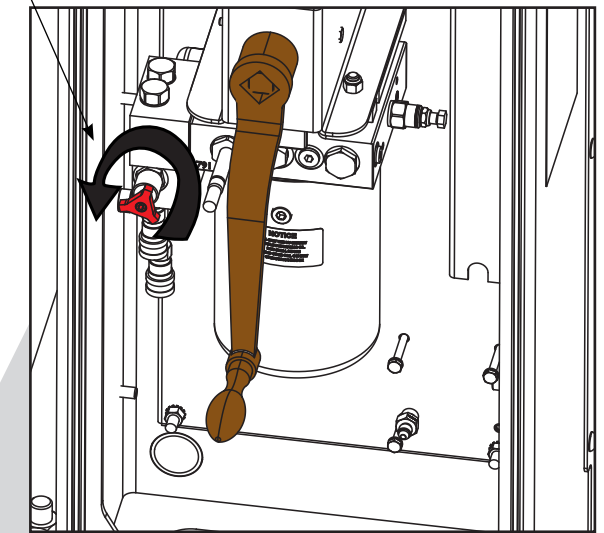

Keep personnel and equipment away from the clear opening. A closing arm can cause injury to personnel or damage to equipment.

CLEAR OPENING

